


## **ASSEMBLY INSTRUCTION**

ITEM#:VF-1104

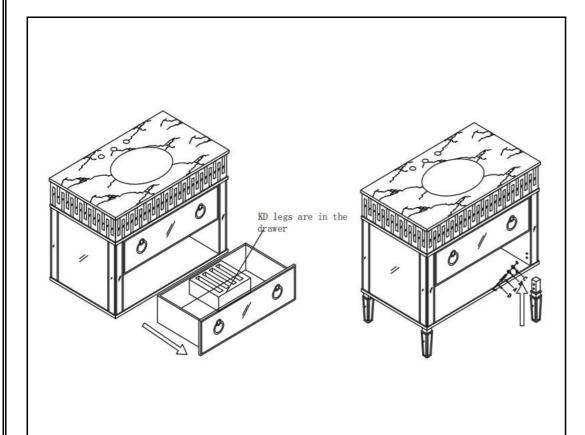

- 1. First, knock down the bottom drawer, then put the screw on it
- 2.Legs are different from each other, please pay more attention on the assembling

| HARDWARE LIST |        |                 |      |
|---------------|--------|-----------------|------|
| No            | FIGURE | DESCRIPTION     | Q'TY |
| А             |        | BIGGER HEX BOLT | 8    |
| В             |        | SPRING WASHER   | 8    |
| С             | 0      | FLAT WASHER     | 8    |
| D             |        | ALLEN KEY       | 1    |

