



**1.** Size of seven type mounting brackets, floor screws (70mm, Ø6mm), plastic sleeves (60mm, Ø8mm) and toilet bowl mounting screws (90mm, Ø4mm).



**2.** The tools required for installation are: Drill, hammer, screwdriver, glue for glass, Triangular rule ...

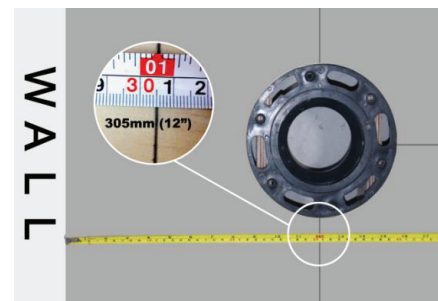

**3.** Draw a cross guideline at the point which is 12" away from the roughing in center to the wall.

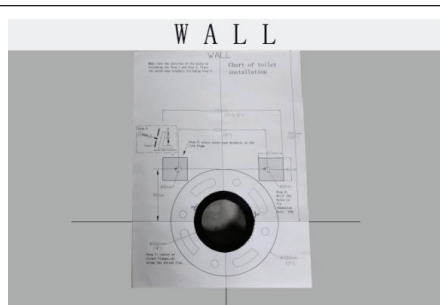


**4.** According to the instruction, cut the drain outlet from the paper, and then put the paper on the floor flange.




**5.** According to the instructed location in the instruction, drill two holes (diameter of which is 8 mm) for the floor screws.



**6.** Insert the plastic sleeves, attach the seven-type mounting brackets and install the floor screws.

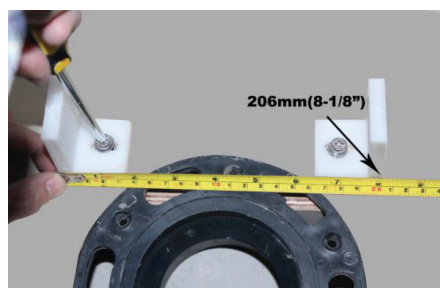

**7.** Adjust the mounting brackets and then tighten the screws. Make sure that it is 8 - 1/8" between the out edge of the seven-type brackets.

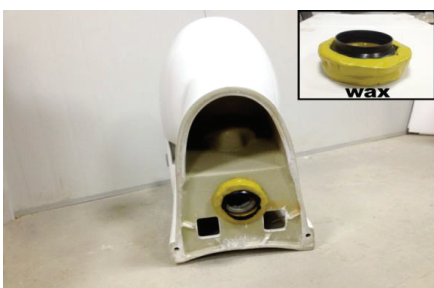

**8.** Stick the wax to the drain hole of toilet bowl.



**9.** Put the toilet bowl above the floor flange and adjust the toilet bowl to be closed to wall.



**10.** Tighten the toilet bowl mounting screws and then put on the caps.



**11.** Installation complete.