
## **Lehigh Collection**

# **Lehigh Porch Swing**


**Assembly Guide** 


### **IMPORTANT!**

<u>DO NOT fully tighten the bolts</u> until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

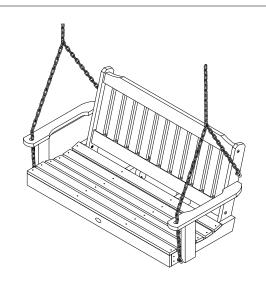

#### HARDWARE INCLUDED







#### \*\* Chain Attachment Kit


- 5/16-18 x 2" Eyebolt Qty: 4
- 5/16-18 Nylon Lock Nut Qty: 4
- 5/16 Flat Washer Qty: 4
- HDK-CHAINLONG Qty: 2
- HDK-CHAINSHORT Qty: 2
- Chain Link Connector Qty: 2

#### **TOOLS INCLUDED**



#### **CUSTOMER SUPPLIED TOOLS**


1/2" or 13mm Wrench/Socket

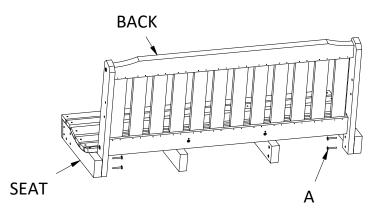


- 1) Attach Back to Seat using
- (2) A Bolts on each side.




AD-PORL1|AD-PORL2 02.26.21

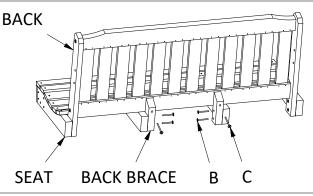

- **2)** Attach Back Brace to Seat using (2) B bolts on each Back Brace.
- **3)** Attach Back Brace to Back using (1) C bolt on each Back Brace.

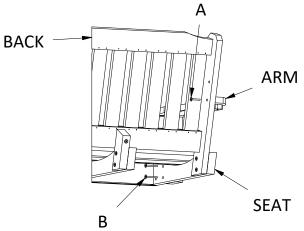


- **4)** Attach Arm to Back using (1) A Bolt.
- **5)** Attach Arm to Seat using (2) B Bolts.
- 6) Repeat on other Side.

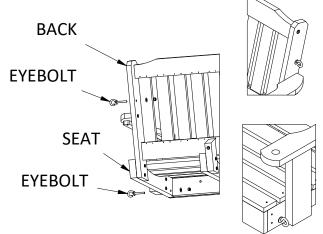

- **7)** Attach Eyebolt to Back. Insert bolt through Back, attach washer and nut on inside of back. Align Eyebolt as shown and tighten.
- **8)** Attach Eyebolt to Seat. Insert bolt through Seat, attach washer and nut on inside of Seat. Align Eyebolt as shown and tighten.
- 9) Repeat on other side.



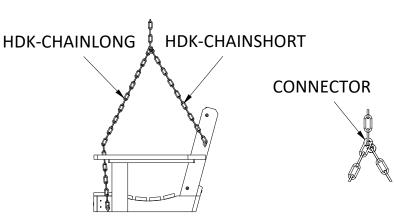

- **10)** Attach HDK-CHAINSHORT to back Eyebolt, attach Chain Link Connector to other end of chain.
- **11)** Attach HDK-CHAINLONG to seat Eyebolt, guide chain through hole in Arm and attach to other end of Chain Link Connector so that arm is level as shown.
- 12) Repeat on other side.
- 13) Attach ends of HDK-CHAINLONG to structure.

