


## **TUB SPOUT INSTALLATION**

- 1. Determine if 3/4" or 1/2" piping is used.
  - a. If 1/2" nipple then use 3/4" x 1/2" face bushing.
  - b. If 3/4" nipple then remove face bushing.
- 2. Nipple should extend 3/4" from finished wall.
- 3. Place finish ring on base of spout.
- 4. Using cloth strap wrench screw spout onto nipple using appropriate sealant.

## CHANGE YOUR TUB SPOUT AND ADD A HANDSHOWER

- 1. Remove the old spout.
- 2. Screw the new spout tightly onto the pipe nipple. NOTE: It fits 1/2" or 3/4" pipe.
- 3. Connect hose to new spout.
- 4. Attach handshower to the other end of hose and mount to wall.

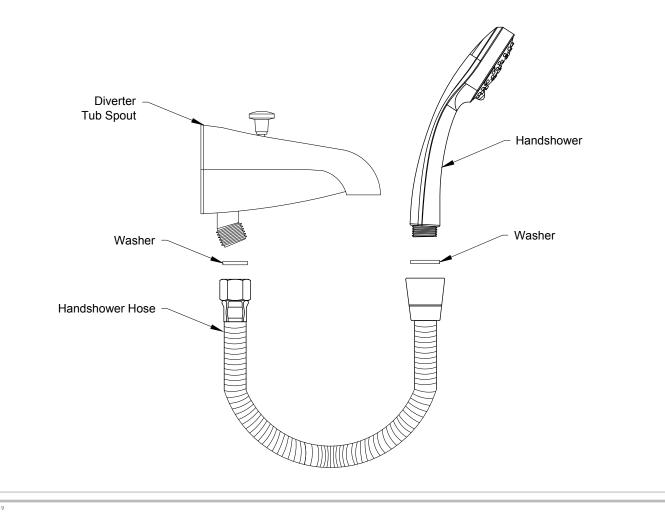

CREATED 4.11.2019

To learn more about JACLO's warranty, please visit **jaclo.com**