

installation instruction

1. remove bushing (part A) from spout.

2. remove housing (part B) from spout



3. wrap PTFE valve packing tape on both bushing and pipe

(Considering the different PTFE valve packing taps are with different thickness, please wrap Teflon at least 6 cycles. It would be better to wrap more than 6 cycles.)




4. screw pipe into bushing



5. screw bushing into housing



6. screw housing into spout

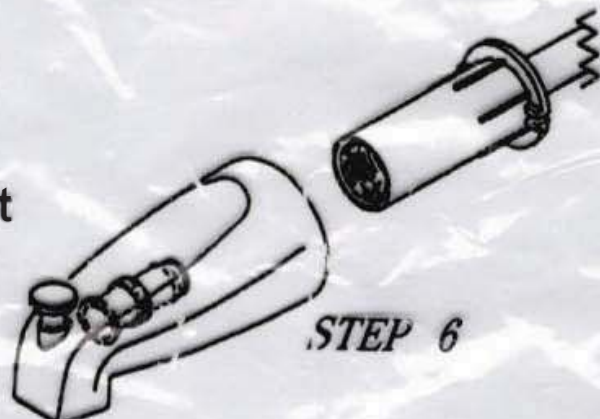

MADE IN TAIWAN