




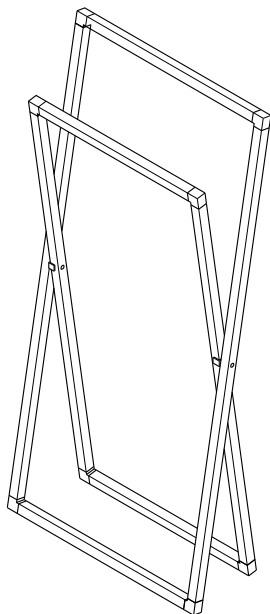


## Pedestal X-Style Iron Frame Towel Rack Installation




### Parts:

Straight Tube			"S" bracket	Gasket
			 2 Pcs	 4 Pcs
A	15-1/8"	2 Pcs	 2 Pcs	Two-way connector
B	13-1/2"	2 Pcs		 8 Pcs
C	30-1/2"	2 Pcs		
D	34-5/8"	2 Pcs		

www.kingstonbrass.com  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com  
12775 Reservoir Street, Chino, CA91710


### TOOLS REQUIRED



Rubber Mallet



Allen Wrench

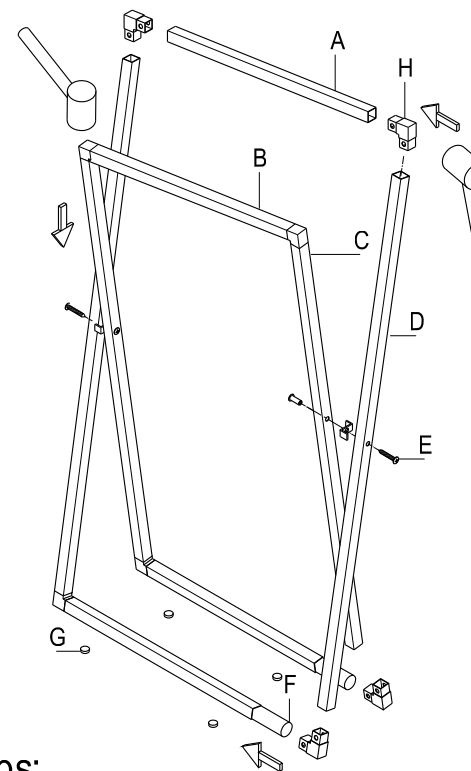

### Installation Steps:

- Step1. Straight tubes by length, you should have 2 of each length, insert a counterweight rod (part F) into a tube A (15-1/8") and one into tube B (13-1/2"), make sure each tube has two small holes on one side.
- Step2. Using two-way connectors (part H) assemble 2 frames, one using tubes A & C and the other frame using Tubes B & D, making sure that the holes on the tube that has the counterweight rods are facing towards the outside of the frame, two-way connectors (part H) should be gently tapped into place using a rubber mallet.
- Step3. Attach the two frames together using the "S" bracket (part E) and the plug and screw included in your hardware package.
- Step4. Complete the installation by using the gaskets (part G) to cover the exposed holes on the bottom of the towel rack.

### Cleaning

Clean with a damp cloth only.  
Avoid using metal or abrasive polishes.