


INSTALLATION INSTRUCTIONS

K1-4700

EIGHT PRONG BRASS SHOWER ROSE

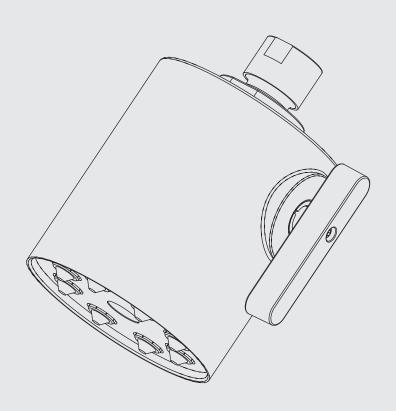

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

Flow Rate

IAPMO/cUPC Listed Meets A112.18.1




Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Steps 1


Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

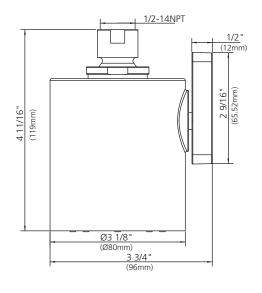



Apply pipe tape on the threads of shower arm (which is not included in this product package). Tighten the shower head to shower arm with wrench.

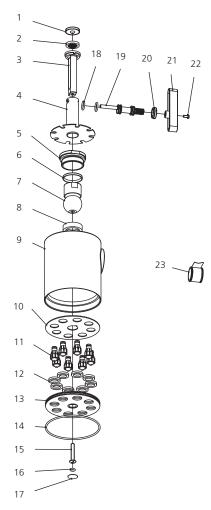

1	Flow restrictor (113011)	13	Front cover (112001)
2	Filter seal (022028)	14	O-ring (072013)
3	Holder (112428)	15	Screw (008037)
4	Holder assembly (112431)	16	O-ring (048044)
5	Nut (054903)	17	Index disc (023322)
6	Washer (060151)	18	O-ring (048067)
7	Ball joint (057008)	19	Eccentric shaft (112429)
8	Oil seal (058101)	20	Fixing ring (047004)
9	Shell (033715)	21	Handle (069769)
10	Front plate (112132)	22	Screw (053029)
11	Diverter (114017)	23	Teflon tape (203000)
12	Oil seal (058053)		

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177