

INSTALLATION INSTRUCTIONS

M2-2300

FLEETWOOD CROSS HANDLE SINGLE-LEG BATH SHOWER MIXER WITH BLACK HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH

M2-2302

FLEETWOOD CROSS HANDLE SINGLE-LEG BATH SHOWER MIXER WITH WHITE HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH

M2-2303

FLEETWOOD CROSS HANDLE SINGLE-LEG BATH SHOWER MIXER WITH METAL-FINISH HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH

M2-2301


FLEETWOOD LEVER SINGLE-LEG BATH SHOWER MIXER WITH BLACK HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH

M2-2304

FLEETWOOD LEVER SINGLE-LEG BATH SHOWER MIXER WITH WHITE HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH


M2-2305


FLEETWOOD LEVER SINGLE-LEG BATH SHOWER MIXER WITH METAL-FINISH HANDLE TRIM ONLY, TO SUIT R1-4210 ROUGH

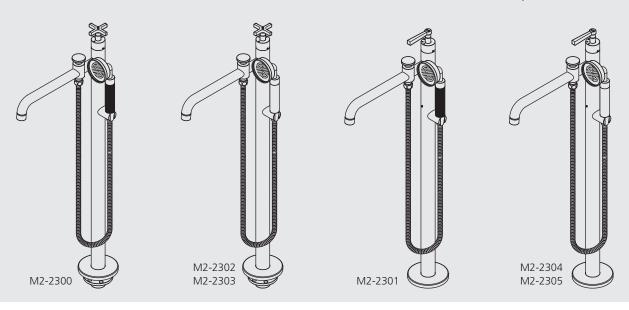

Dimensions in Inches (& Millimetres)


M2-2300 M2-2302 M2-2303

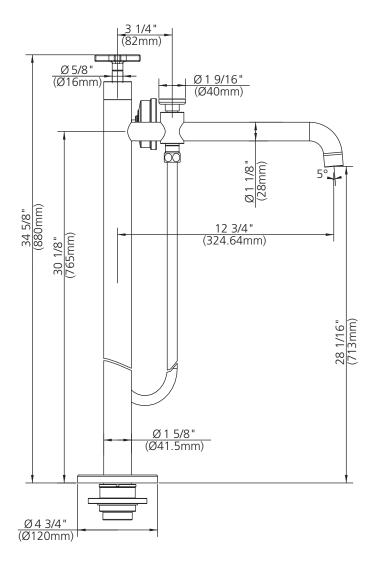


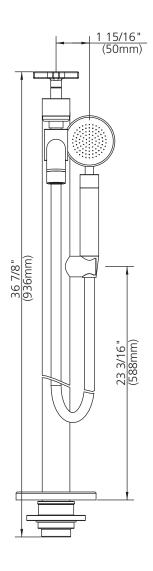

Dimensions in Inches (& Millimetres)

M2-2301 M2-2304 M2-2305

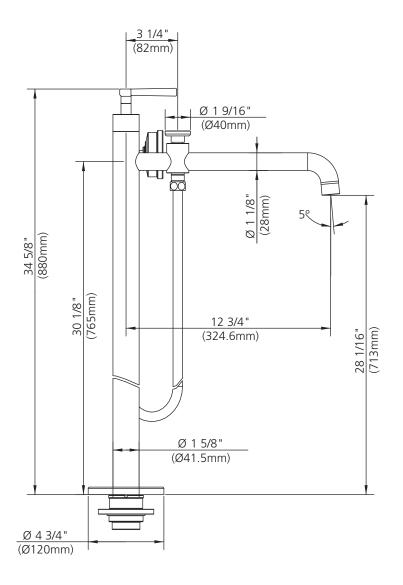

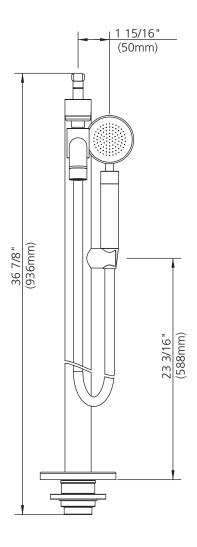

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards


IAPMO/cUPC Listed Meets A112.18.1

Flow Rate

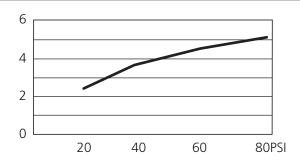

Steps 1-2


Installation Procedure

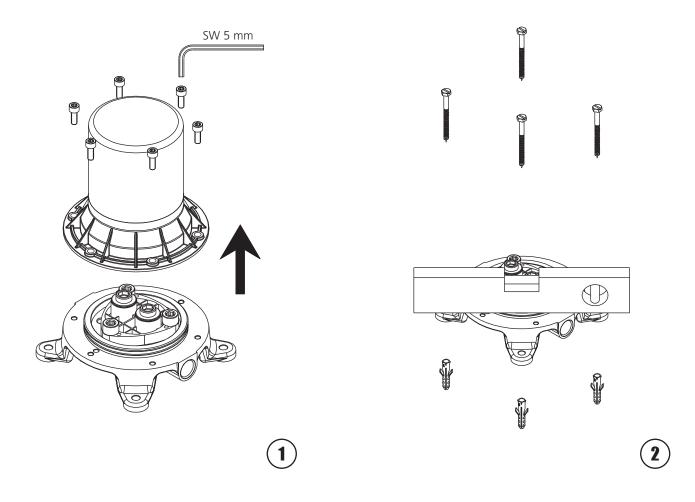

- Use a 5 mm Allen wrench to loosen the screws, then take off the protective cap.
- Use the body as a template to mark the position of the screw holes in the subfloor. Fasten the body to the subfloor with the screws provided. Make sure that the body is level.

Steps 3-4


Installation Procedure

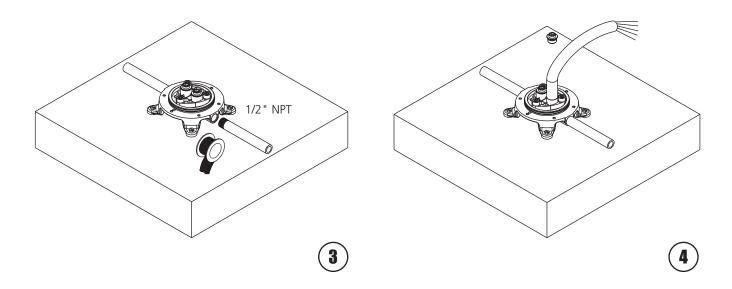

- Use a 5 mm Allen wrench to loosen the screws, then take off the protective cap.
- Use the body as a template to mark the position of the screw holes in the subfloor. Fasten the body to the subfloor with the screws provided. Make sure that the body is level.

Steps 5-6


Installation Procedure

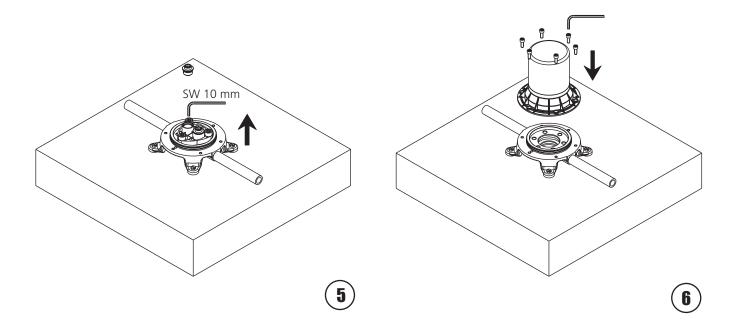


- Use a 10 mm Allen wrench to remove the plastic body.
- Install the protective cap. Use a 5 mm Allen wrench to tighten the screws.

Steps 7-8

Installation Procedure

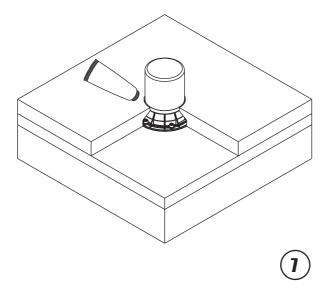


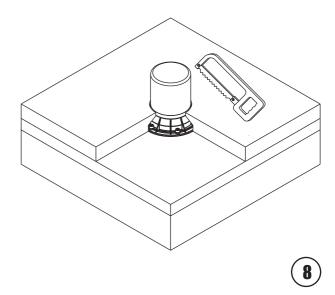


- Install the flooring material. Please know and follow all applicable local codes regarding waterproofing.
- The surface of the finished floor must fall somewhere between 15mm to 90mm from the top of the protective cap. After the floor is finished, cut off the protective cap with a hack saw or reciprocating saw. Please note that the cutting point should be within 10mm height from the floor surface.

Steps 9-10

Installation Procedure

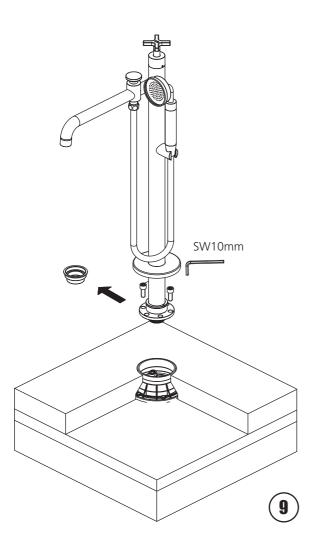

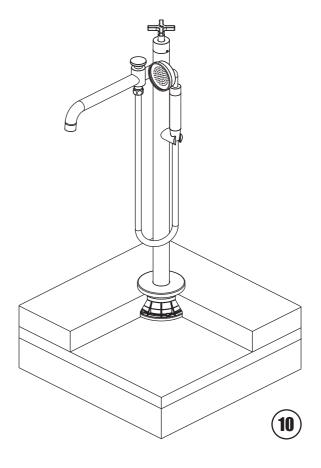


- Adjust the angle of the faucet and then install the faucet to the body with screws.
- To cover the protective cap, then to do water test and finish the installation.

Exploded View

Parts List

M2-2300 M2-2302 M2-2303

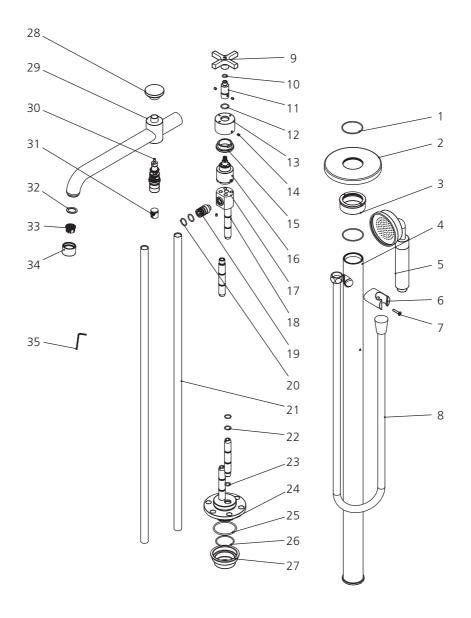


1	O-ring (072014)	13	Handle base (215531-50)	25	O-ring (004045N)
2	Flange (019319)	14	Set screw (008191)	26	O-ring (072088N)
3	Nut (009288)	15	Adjusting ring (104257)	27	Protective Cap (045247)
4	Connection tube (064320)	16	Cartridge (507917)	28	Button (036270)
5	Hand shower (S2110314)	17	Inside body (066551)	29	Spout Assembly (523835)
6	Shower bracket (112424)	18	Adapter (067928)	30	Diverter (501347E)
7	Screw (008734)	19	Adapter (067927)	31	Backflow Preventer (519208)
8	Shower hose (105681)	20	O-ring (072016)	32	Oil seal (010899)
9	Handle (069260)	21	Internal pipe (051645)	33	Aerator insert (114237R)
10	O-ring (048015)	22	O-ring (048085)	34	Aerator housing (305781)
11	Extension rod (110489)	23	O-ring (004509N)	35	Allen key (031003)
12	O-ring (004076)	24	Body (076701)		

Exploded View

Parts List

M2-2301 M2-2304 M2-2305

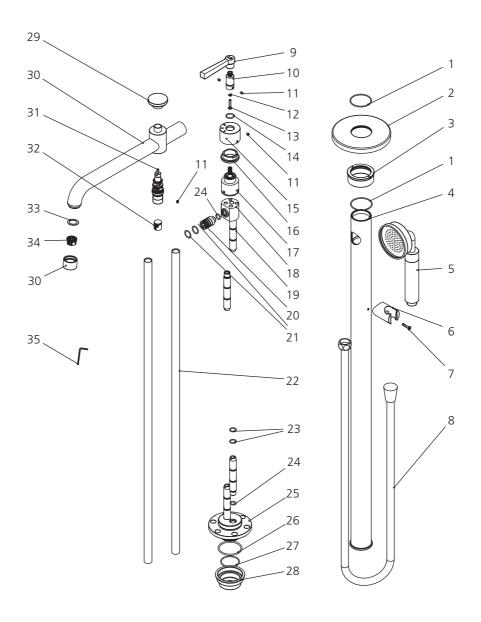

1	O-ring (072014)	13	Screw (008500)	25	Body (076701)
2	Flange (019319)	14	O-ring (004076)	26	O-ring (004045N)
3	Nut (009288)	15	Handle base (215531-51)	27	O-ring (072088N)
4	Connection tube (064320)	16	Adjusting ring (104257)	28	Protective Cap (045247)
5	Hand shower (S2110314)	17	Cartridge (507859N)	29	Button (036270)
6	Shower bracket (112424)	18	Inside body (066551)	30	Spout Assembly (523835)
7	Screw (008734)	19	Adapter (067928)	31	Diverter (501347E)
8	Shower hose (105681)	20	Adapter (067927)	32	Backflow Preventer (519208)
9	Handle (029686-50-T)	21	O-ring (072016)	33	Oil seal (010899)
10	Extension rod (110488)	22	Internal pipe (051645)	34	Aerator insert (114237R)
11	Set screw (008191)	23	O-ring (048085)	35	Aerator housing (305781)
12	Washer (013570)	24	O-ring (004509N)	36	Allen Key (031003)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177