



INSTALLATION INSTRUCTIONS


X1-1041 (XO3050)

ZU BASIN MONO, NO P.U.W.

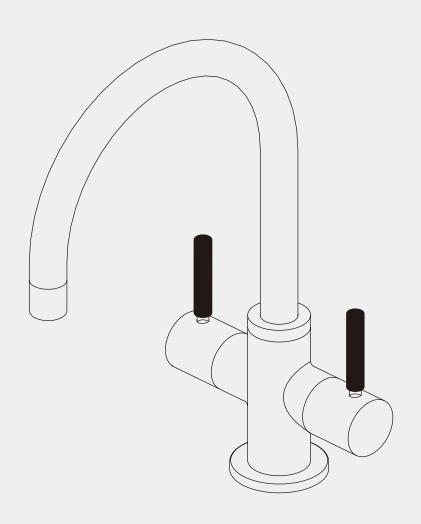

X1-1041

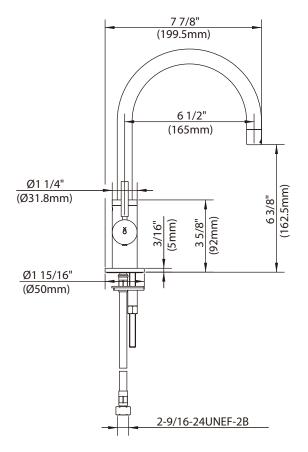

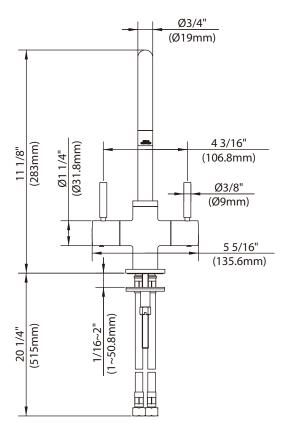

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

IAPMO/cUPC Listed Meets NSF 61-9 Meets A112.18.1

Flow Rate

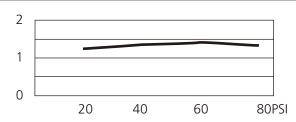


Please note:


Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Steps 1-2

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

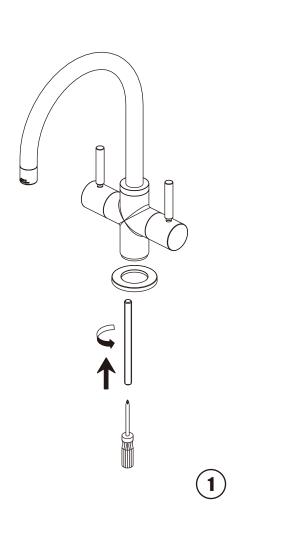

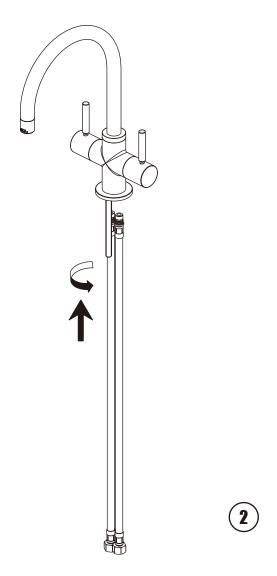



- Put the escutcheon under the bottom of the faucet. Attach the fixing bolt.
- Attach the flexible hoses to the faucet.

Steps 3-4

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

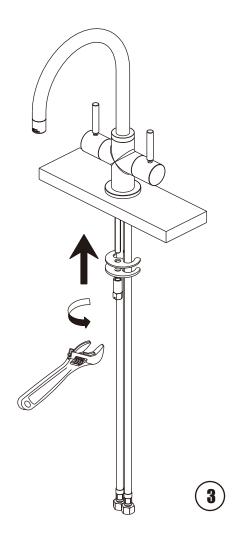

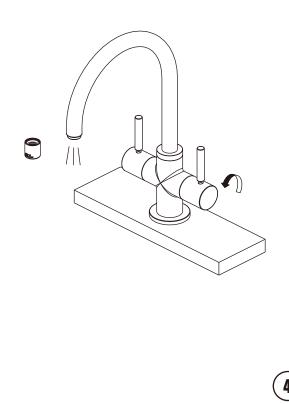

Install faucet through deck hole. From underneath the sink, install washers and nut.

Warning! When installing flexble hose, please notice:


- 1. There should be no torsion or deformation
- 2. Do not fold into a V or L shape.
- 3. Do not use if there is any crack or deformation.

After installing faucet, remove aerator and open the hot and cold supplies. Check for leaks. Turn on faucet handle for one minute to flush debris from faucet. Turn off the handle and re-assemble the aerator. Finish.

Exploded View

Parts List

X1-1041

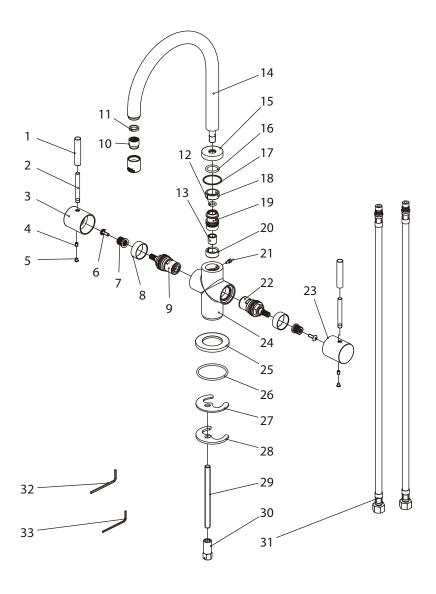

1	Handle sleeve (126129)	12	O-ring (004031N)	23	Handle seat (215502)
2	Handle stem (108926)	13	Adaptor (067894N)	24	Body (076168W)
3	Handle seat (215502-50)	14	Spout assembly (139861W-54)	25	Escutcheon (303459)
4	Set screw (292562)	15	Collar (000096)	26	O-ring (004072N)
5	Plug (028008)	16	O-ring (004005N)	27	Washer (013039)
6	Screw (008063)	17	Plastic ring (200002)	28	Washer (013040)
7	Handle adaptor (205469)	18	Clip (012060)	29	Screw bolt (017139)
8	Nut (009267)	19	Adaptor (067729W)	30	Nut (054857)
9	Cartridge (H) (507175W)	20	Clip (012112N)	31	Flexible hose (105652W)
10	Aerator insert (553661N)	21	Screw (008252)	32	Allen key (031000)
11	Oil-seal (010519N)	22	Cartridge (C) (507176W)	33	Allen key (031003)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177