


**INSTALLATION INSTRUCTIONS** 

R1-4005

CONCEALED 8-INCH SHOWER ROSE POSITIONING KIT


Y1-4604

CONCEALED 8-INCH SHOWER ROSE, TO SUIT R1-4005 ROUGH

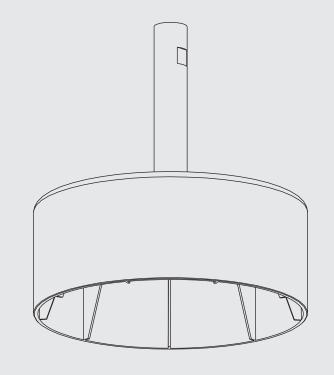


Y1-4604


R1-4005

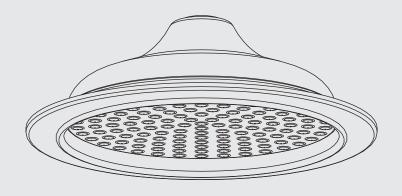

LEFROY BROOKS

## **Dimensions** in Inches (& Millimetres)

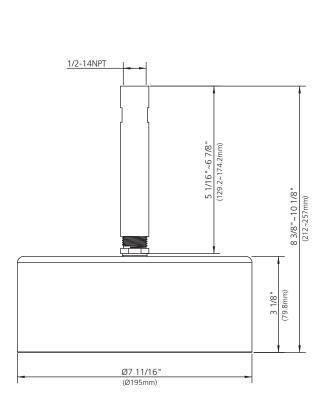

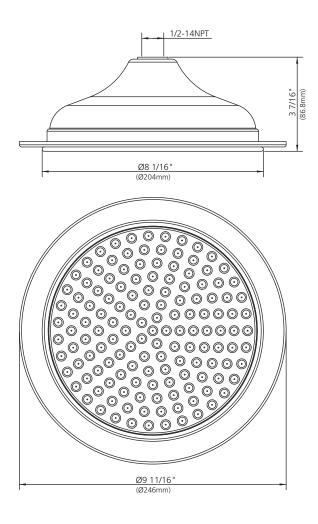

R1-4005 Y1-4604

Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

# What you need to know

### **Tools:**

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



#### **Maintenance**

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

### **Safety Tips**

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

### **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.


## Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

### **Standards**

IAPMO/cUPC Listed Meets A112.18.1


#### **Flow Rate**



# Steps 1-3


### **Installation Procedure**


Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

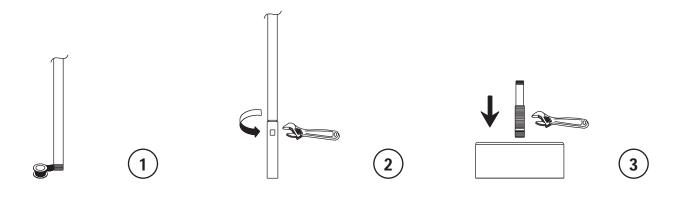


- Apply pipe tape to the threads of the water pipe.
- Install the connecting tube to the water pipe and tighten with a wrench.
- Tighten the internal pipe to the plastic drum with a wrench.

# Steps 4-6

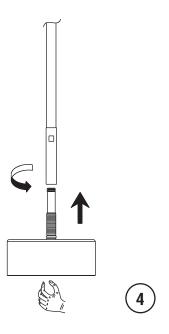

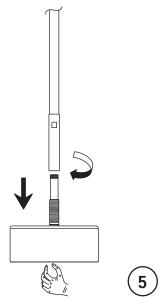






- Install the assembled internal pipe and plastic drum to the connecting tube, then adjust to an appropriate position (the degree of adjustability is 45mm).
- After the construction and decoration of the ceiling is finished, remove the internal pipe with the plastic drum by hand.
- Disconnect the internal pipe from the plastic drum by wrench.


# Steps 7-9

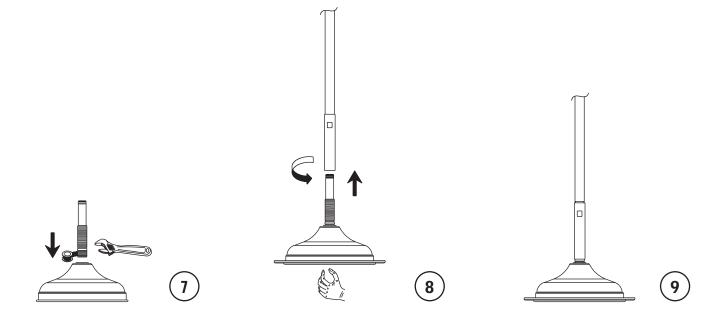


- Apply pipe tape on the threads of the internal pipe. Then tighten the internal pipe to the showerhead with wrench.
- Place the decorative ring to the shower head.
  Apply sufficient silicon sealant to the top of the decorative ring, then install the assembled internal pipe and showerhead to the connecting tube by hand until flush with the ceiling.
- Finish and water test to make sure no leakage.

# **Exploded View**

### **Parts List**

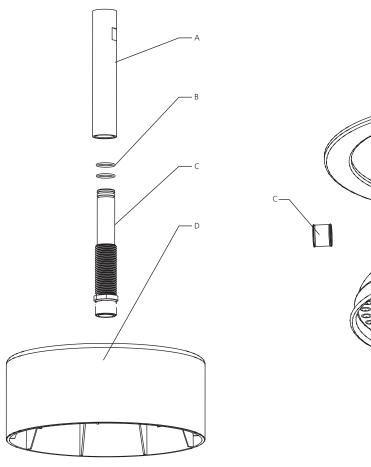

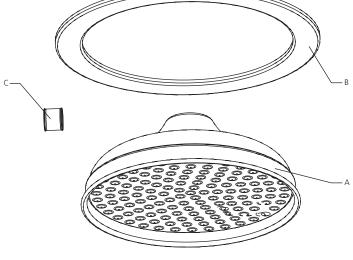

#### R1-4005

- A Connecting tube (117023)
- B O-ring (048096R)
- C Internal pipe (117024)
- D Plastic drum (117021)

#### Y1-4604

- A Shower head (S1110825)
- B Decorative rim (117020)
- Teflon tape (203000)

#### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooksusa.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177