


PRODUCT NAME: Abode 8 Light Chandelier

ITEM NUMBER: 25154TXBPN


Please consult a qualified electrician for hanging fixture and wiring.

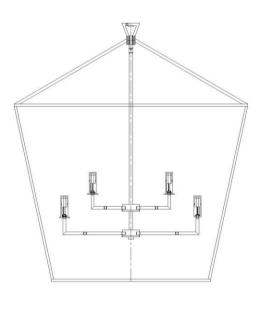


Bulb (not included): 8\*60w E12 Bulbs


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

## Locate all hardware & components before discarding packaging

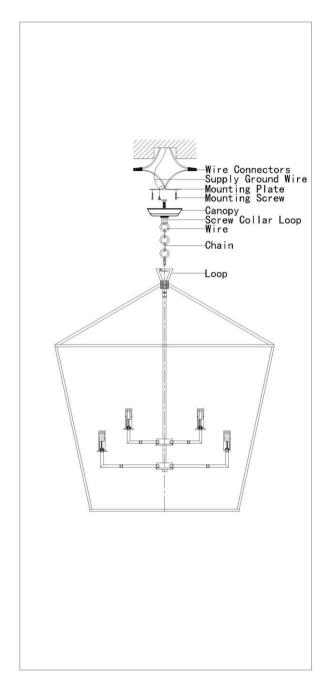

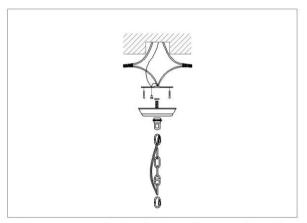

- 1. Remove mounting bracket from fixture and install to electrical box.
- 2. Attach appropriate amount of chain to loop to achieve desired mounting height. Thread wire through every 3rd loop of chain.
- 3. Remove screw ring from collar loop and slide down chain. Place canopy onto chain. Install nipple and cross bar into top of chain loop.
- 4. Wire fixture to wires in outlet box. Copper wire is for Ground.
- 5. Pull canopy through screw ring up chain to ceiling and tighten securely.

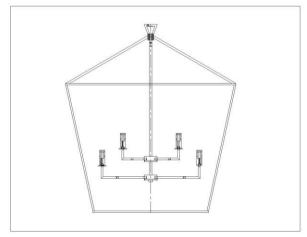

6. Install 8 max 60W candelabra bulbs.