
Corner TV Wall Mount

Instruction Manual

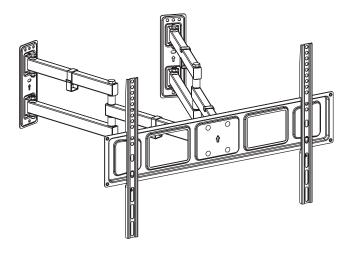

SKU: MOUNT-CR70C



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/mount-cr70c

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com Chat live with an agent!



309-278-5303

🔨 WARNING!


If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

🕂 WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS					
A (x1) Mount	B (x2 VESA Bra	2)			
					$\bigcirc \bigcirc$
M-A (x4) M5x14	M-B (x4) M6x14	M-C (x4) M6x30	M-D (x4) M8x30	M-E (x4) M8x50	M-F (x4) Washer
\bigcirc	()	2			
M-G (x8) 5mm Spacer	M-H (x8) 15mm Spacer	T-A (x1) Wrench			
		\bigcirc			
W-A (x8) ST6.3x55 Screw	W-B (x8) Concrete Anchor	W-C (x8) Washer			
NOTE: NOT ALL HARDWARE INCLUDED WILL BE USED					
CAUTION! DO NOT INSTALL INTO DRYWALL ALONE. VERIFY YOUR WALL CONSTRUCTION. USE WOOD STUDS TO					
MOUNT. We include mounting for brick and concrete walls. If unsure, please contact us at vivo-us.					

com, email at help@vivo-us.com, or call us at 309-278-5303.

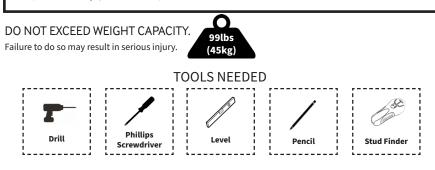


ASSEMBLY STEPS

STEP 1

OPTION A: Wood Stud Wall Installation

Use Mount **(A)** to mark mounting holes on the wall where studs are located. Use of a stud finder and a level is highly recommended. Using a 3/16" (4.5mm) drill bit, drill holes at least 2.2" (55mm) deep into marked locations. Attach mount to wall using ST6.3x55 Screws **(W-A)** with Washers **(W-C)**.

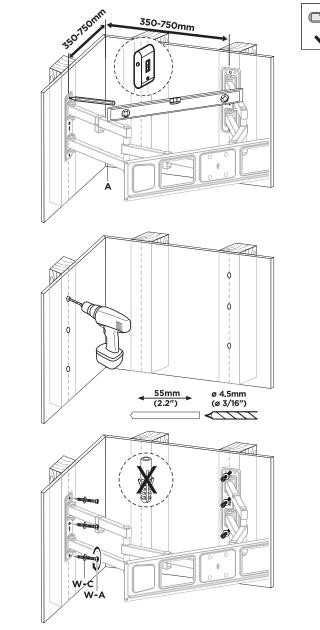





STEP 1 (Continued)

OPTION B: Concrete/Brick Wall Installation


Use Mount (A) to mark mounting holes on the wall. Using a 3/8" (10mm) drill bit, drill holes at least 2.4" (60mm) deep into marked locations. Press Concrete Anchors (W-B) into holes, then attach Mount (A) to wall using ST6.3x55 Screws (W-A) with Washers (W-C).

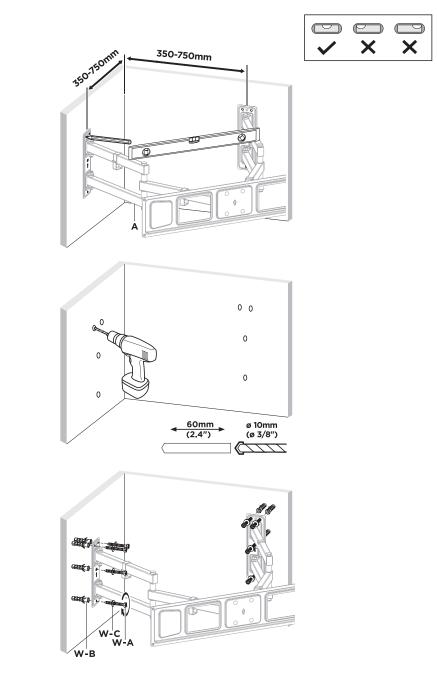


STEP 2

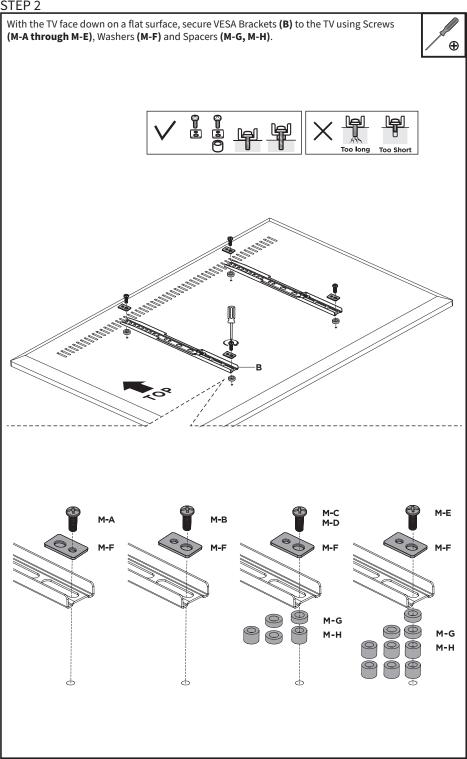


STEP 3

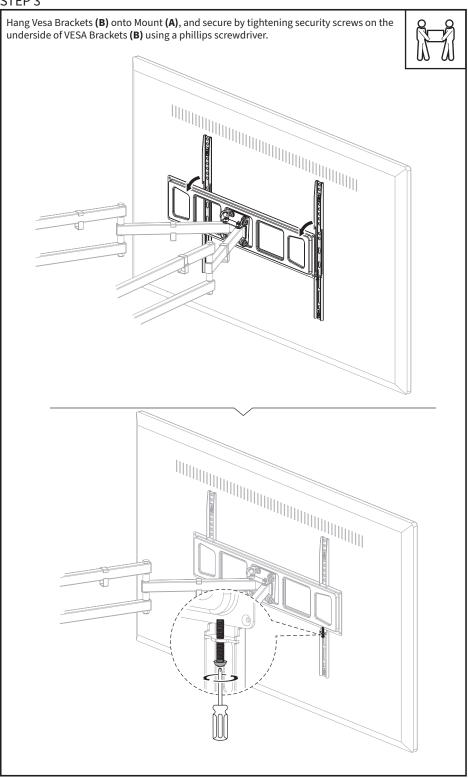

STEP 4

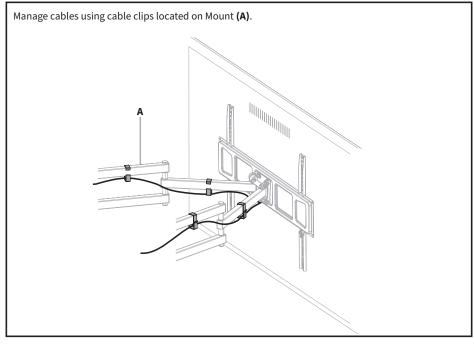

STEP 5

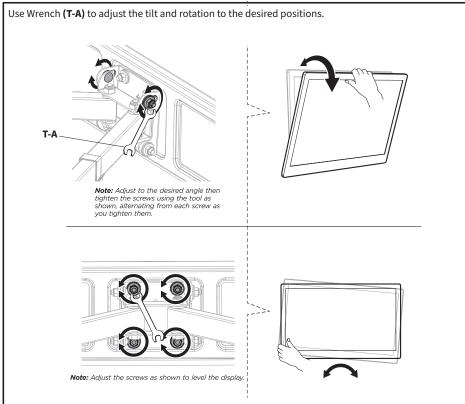



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

