
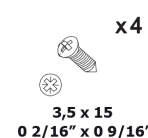


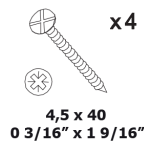

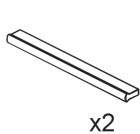
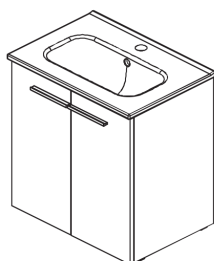


NON INCLUS / NOT INCLUDED

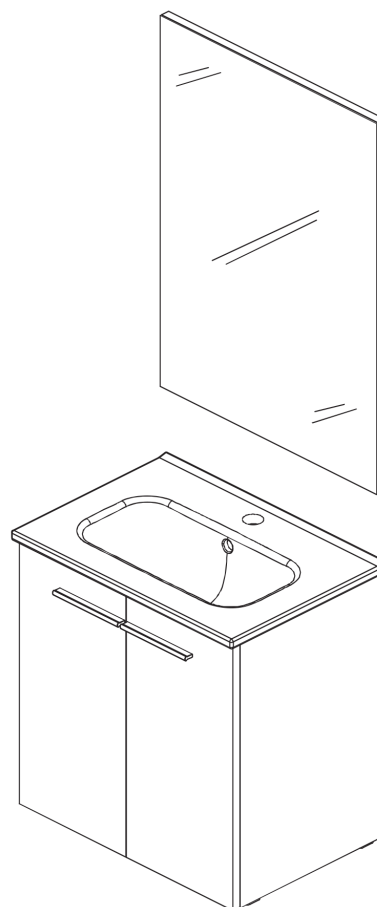

Collection
Installation
Instructions



Model |
Start

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.wsbathcollections.com - info@wsbathcollections.com

01

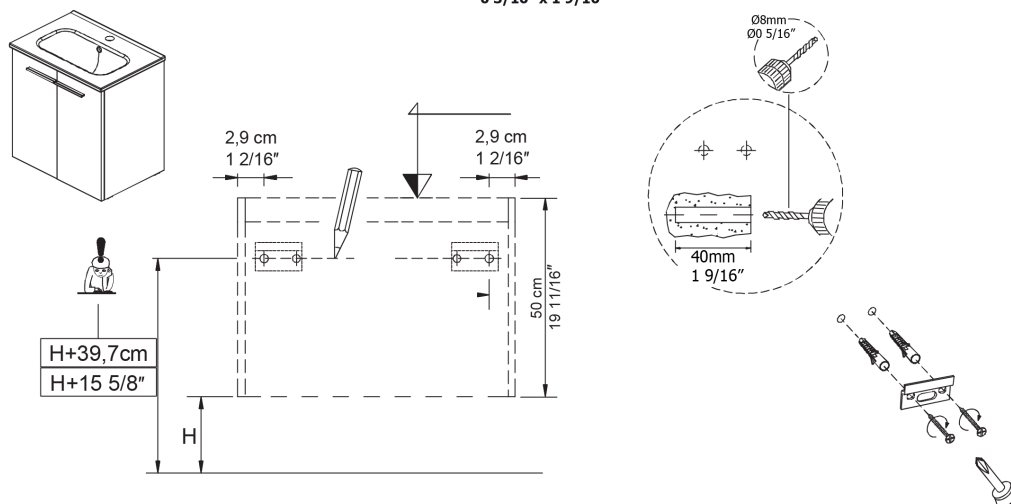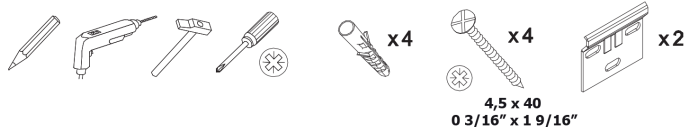

02

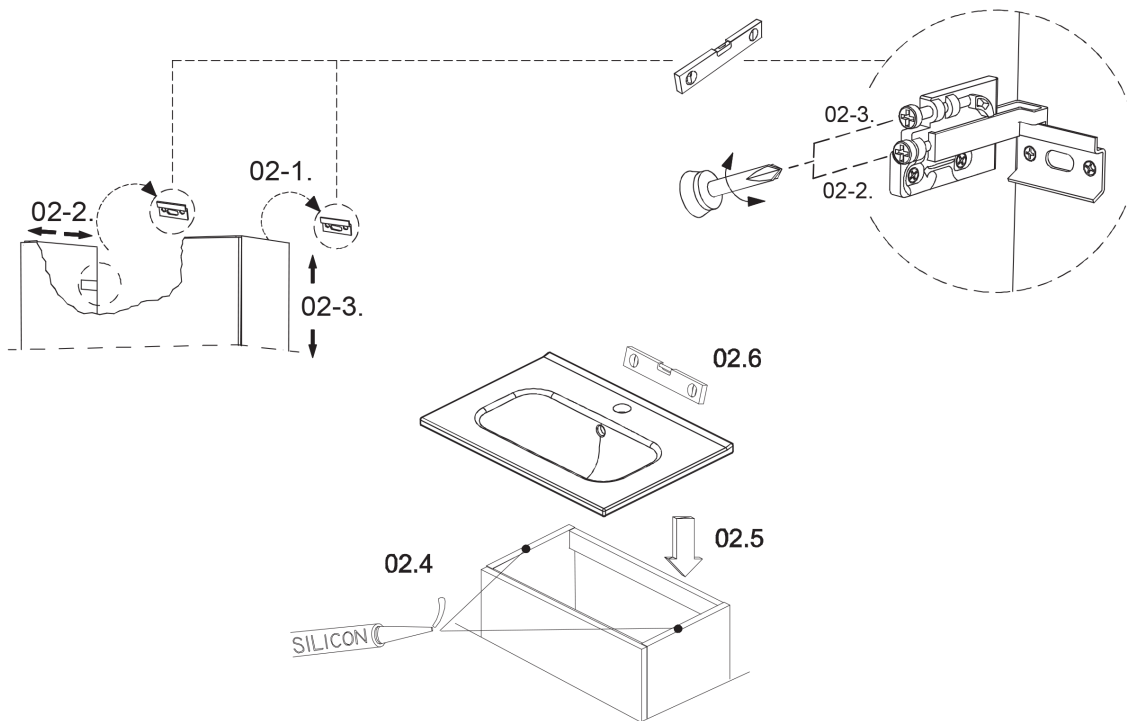

Collection
Installation
Instructions







Model |
Start

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com




03

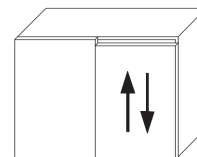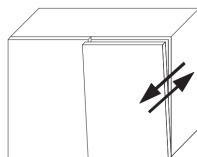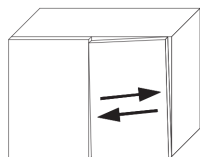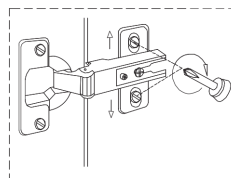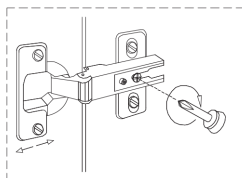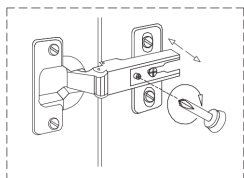

04

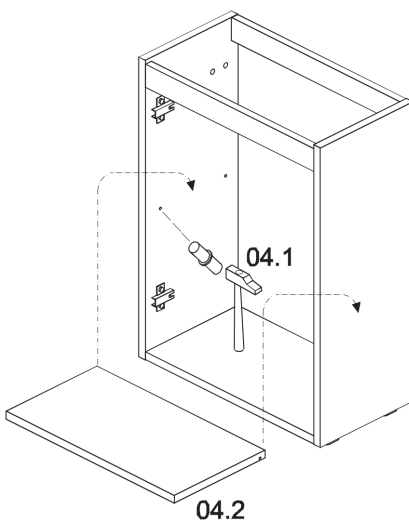

05

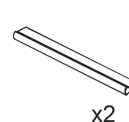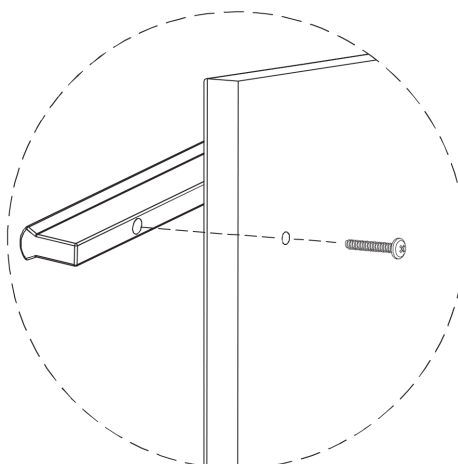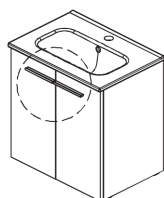

Collection
Installation
Instructions


Model |
Start

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com



06

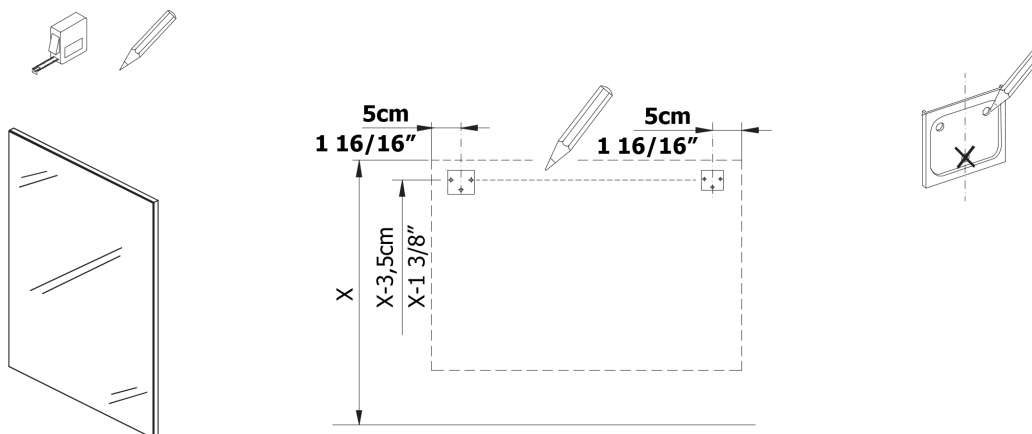

07

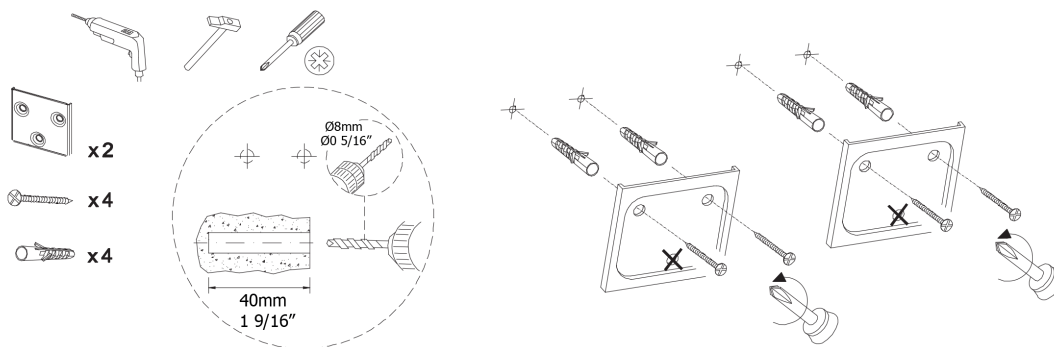

08

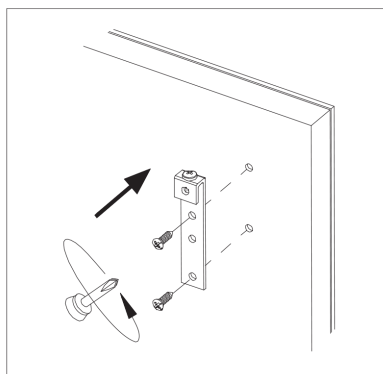

Collection
Installation
Instructions


Model |
Start

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm


WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com

09

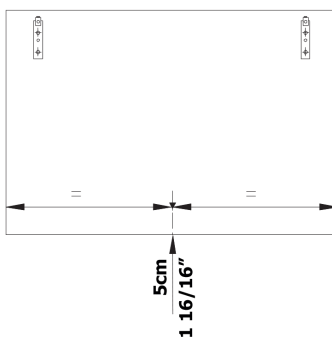

10

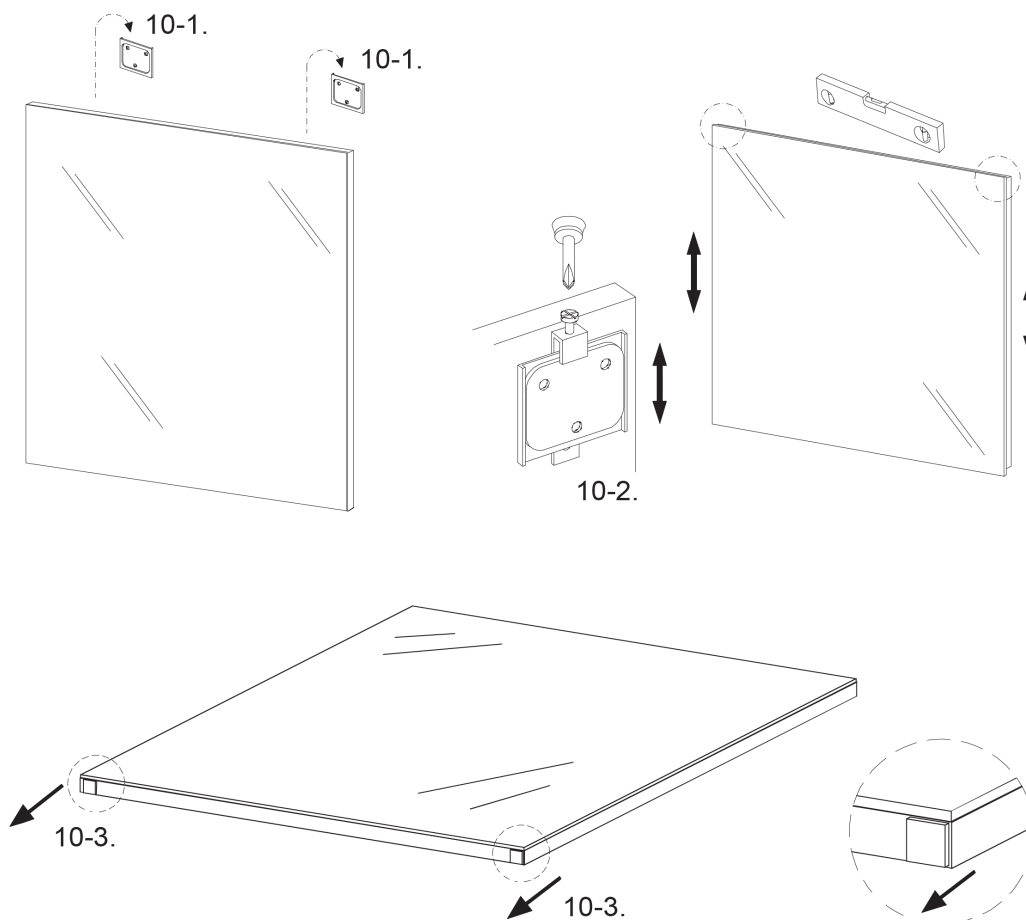

Collection
Installation
Instructions

Model |
Start

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm

WS[®]
BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com