



# Product Installation Instruction

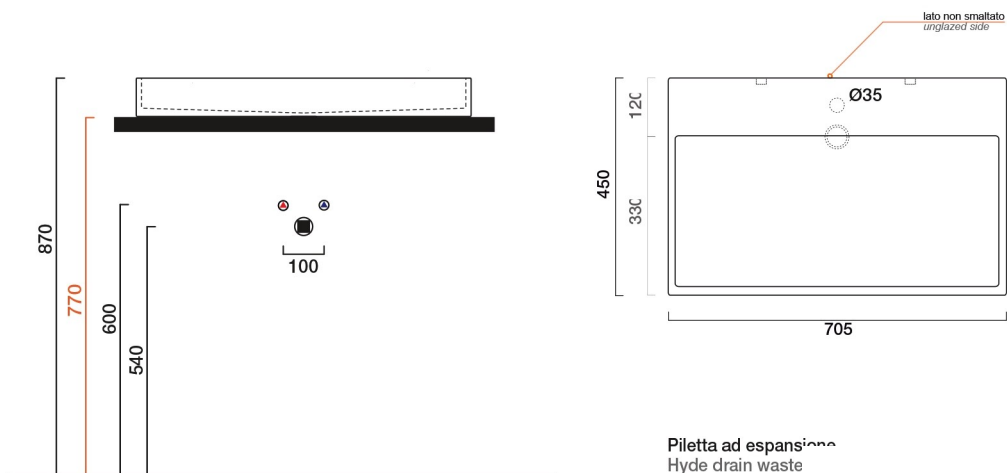

## Counter top installation

Piletta ad espansione  
Hyde drain waste

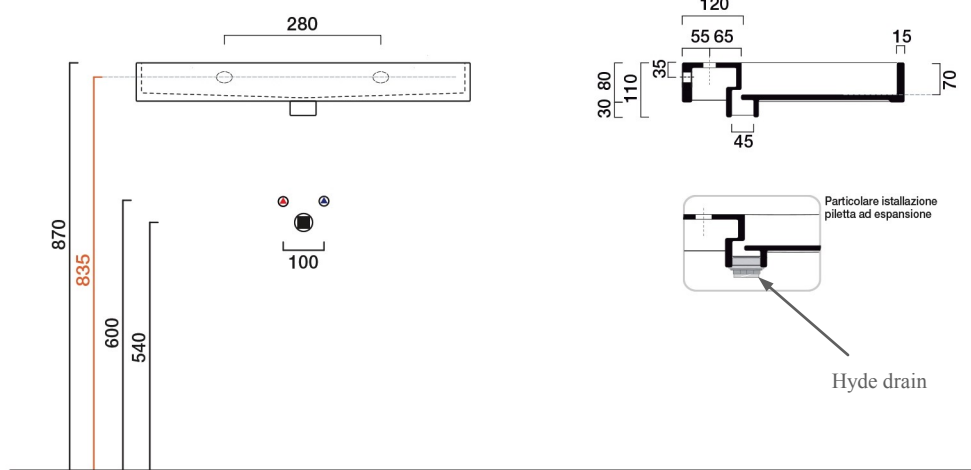

## Wall mount installation

### Hyde drain installation

1. Insert drain at drain opening (underneath the sink)
2. Screw drain inside the hole until it is tight
3. Please note that as you screw the drain inside the hole, it will expand inside the hole

Collection  
Urban

Model |  
Urban 70  
Urban 100  
Urban 120


Dimensions Metric  
*1 inch = 2.54 cm*  
*1 inch = 25.4 mm*

**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215


[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)

# Product Installation Instruction

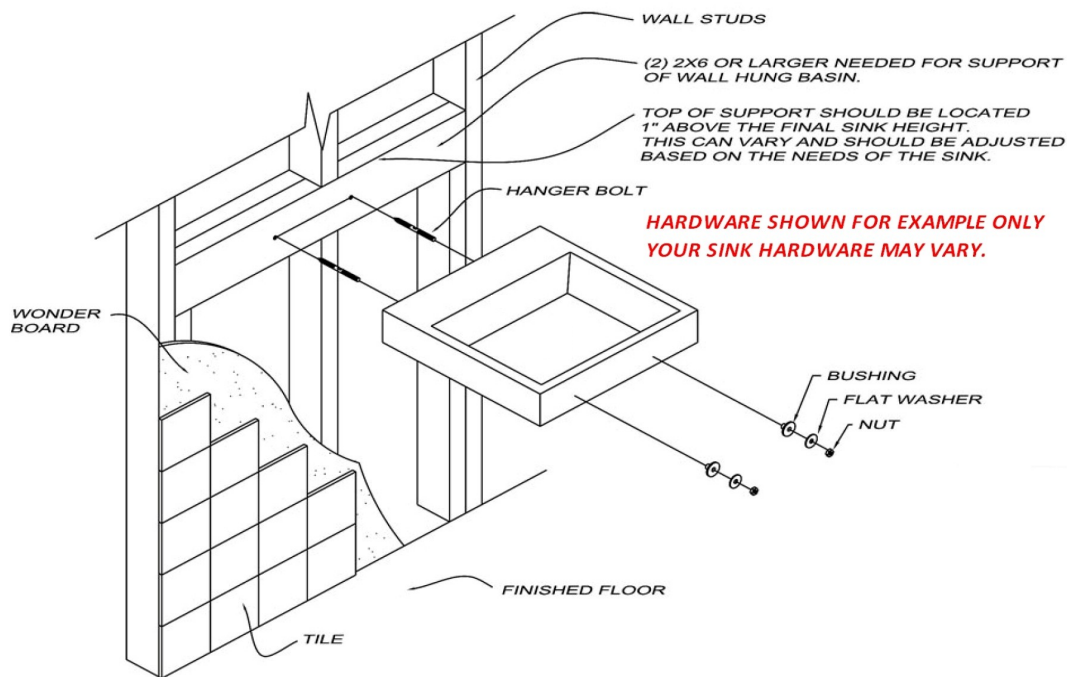

## MOUNT FIXTURES

see individual fixture's installation instructions before installing fixtures

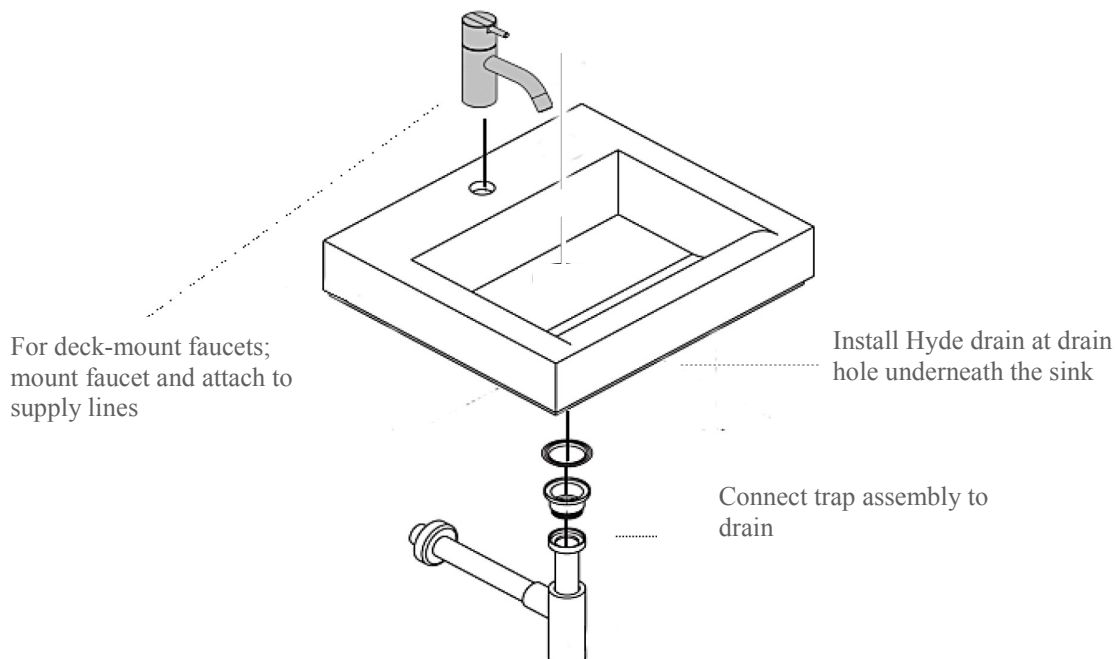

Collection  
Urban

Model |  
Urban 70  
Urban 100  
Urban 120

Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm

**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)