


NOTE:


- Use plywood backing in walls whenever possible, to ensure security to wall.
- When installing mirrors, be sure that distance between center of posts is correct before drilling into wall.
- Do all painting, staining or wall papering before accessory installation.

ITEM NO.	PART NUMBER	QTY.
1	ESCUTCHEON	2
2	POST	2
3	MIRROR HOLDER	2
4	MOUNTING BASE ASSEMBLY	2
6	EXTERNAL POST SET SCREW	2
7	DRYWALL SCREW	4
8	DRYWALL SCREW TOGGLER	4
9	O-RING	4
10	NYLON TIP SET SCREW	6
11	INTERNAL POST SET SCREW	2
12	MIRROR HOLDER FELT	2
13	MIRROR	1

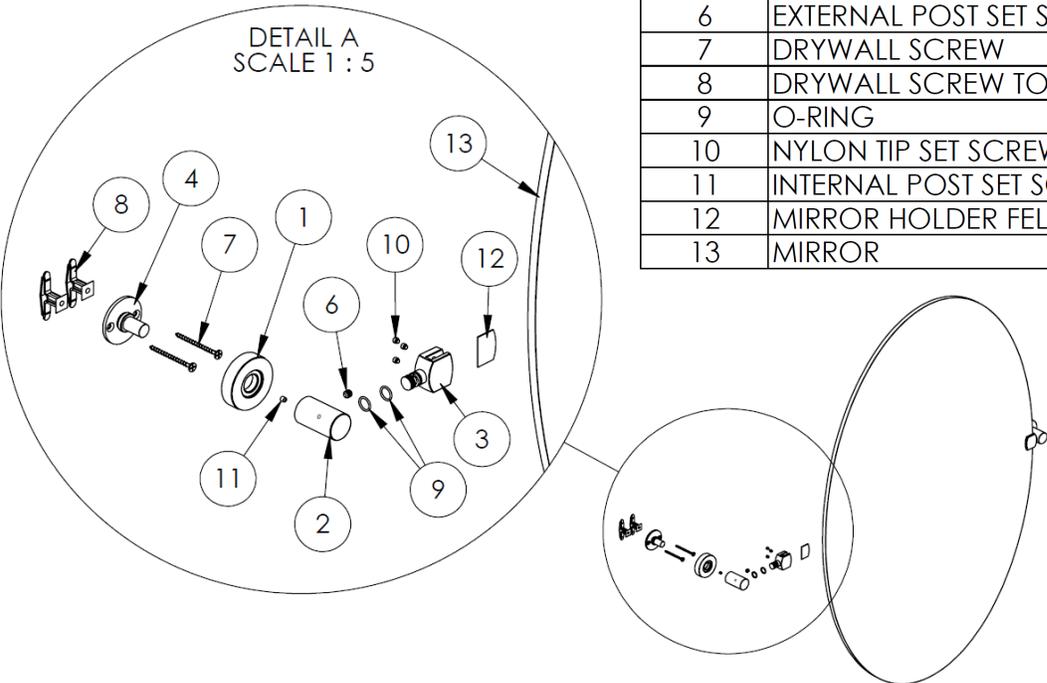

- 1) Determine where you want to install the mirror.
- 2) Place mirror assembly on wall at desired position and ensure that it is level.
- 3) With a pencil, mark the centers of the mounting hole positions on the Mounting Base Assembly (4).
- 4) If using the supplied Drywall Toggles/Anchors (8), drill a 5/16" hole at each marked position.
NOTE: On tile surfaces, hollow wall anchors are required (not supplied).
- 5) Insert anchors into holes until flush with the wall (a hammer may be needed to lightly tap the anchors flush).
- 6) Secure the Mounting Base Assembly (4) to the wall using the supplied Screws (7).
- 7) Install the remaining Escutcheon (1) and Post (2) pieces if necessary to finish installation of mirror assembly posts.
NOTE: Some mirror assemblies will require the Post (2) to be secured to the Mounting Base Assembly (4) with a provided External Post Set Screw (6).
- 8) Attach Mirror (13) to Mirror Holder (3) with the provided Nylon Tip Set Screws (10), being sure to place the Mirror Holder Felt (12) at the metal-to-mirror contact point.

NOTE: For Oval or Round Mirrors (0.9B & 0.9C)

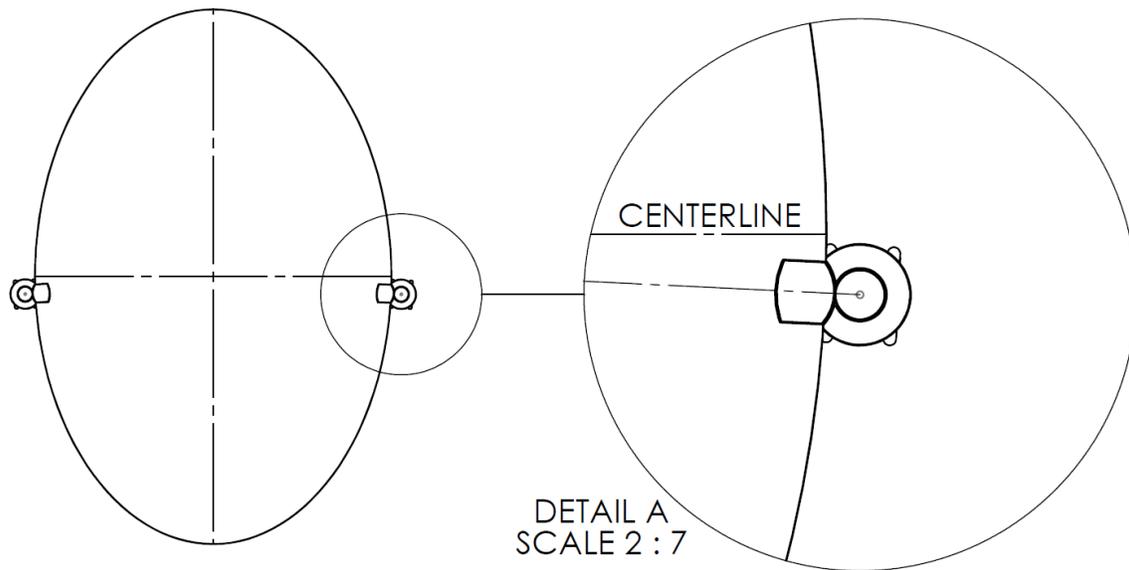

For oval and round mirrors, it is advised that the mounting post assemblies be installed slightly below center, at a perpendicular angle to the tangent line. This provides the mirror assembly with extra support.

IMPORTANT INSTALLATION INFORMATION

- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
 - This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.

To help ensure the beauty of brass accessories, never install an item until construction is almost completed and after:

- Workmen have finished treating nearby tile or marble with acid or chemicals.
- The air conditioning or heat has been turned on.
- The room has been painted or stained.

For technical support or warranty information, please call 718-257-2800