




DYNASTY FIREPLACES

# Allegro DY-BFM Series Installation Guide

BUILT-IN INSTALLATION

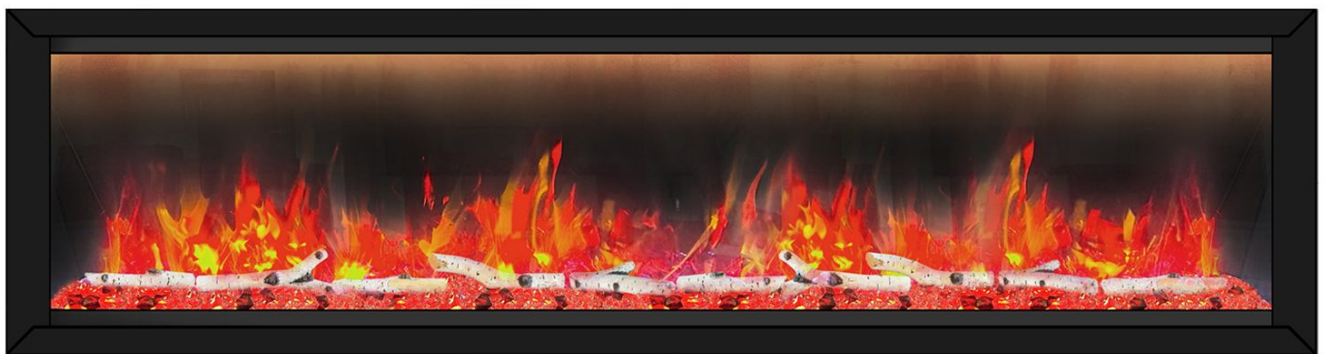

# WARNING & CAUTION PAGE:

## PLEASE NOTE:

- Power on and test the electric fireplace unit prior to installation
- This is a general installation guide - local building codes may vary. Consult local building codes prior to installation.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the product user manual. For assistance or additional information, consult a qualified installer.

Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

**DO NOT** run power cord under carpeting. **DO NOT** cover power cord with throw rugs, runners, or similar coverings. **DO NOT** route power cord under furniture or appliances. Arrange power cord away from traffic area, and where it will not be tripped over.

**ALWAYS** plug heaters directly into a wall outlet/receptacle. **NEVER** use with an extension cord or relocatable power tap (outlet/power strip).

**NEVER** plug this heater into an outlet that is old, cracked, or has any loose wires or connections. Plugging this heater into a faulty outlet could result in electric arcing within the outlet that could cause the outlet to overheat or catch fire

# Allegro Series Installation Guide

---




- Unscrew the bolt and hinge holding the front glass.

To remove the glass, use the hinges to hook onto the glass to pull it forward, or slowly tip the fireplace forward to catch the glass.

Safely set aside glass for later.


# Allegro Series Installation Guide

---

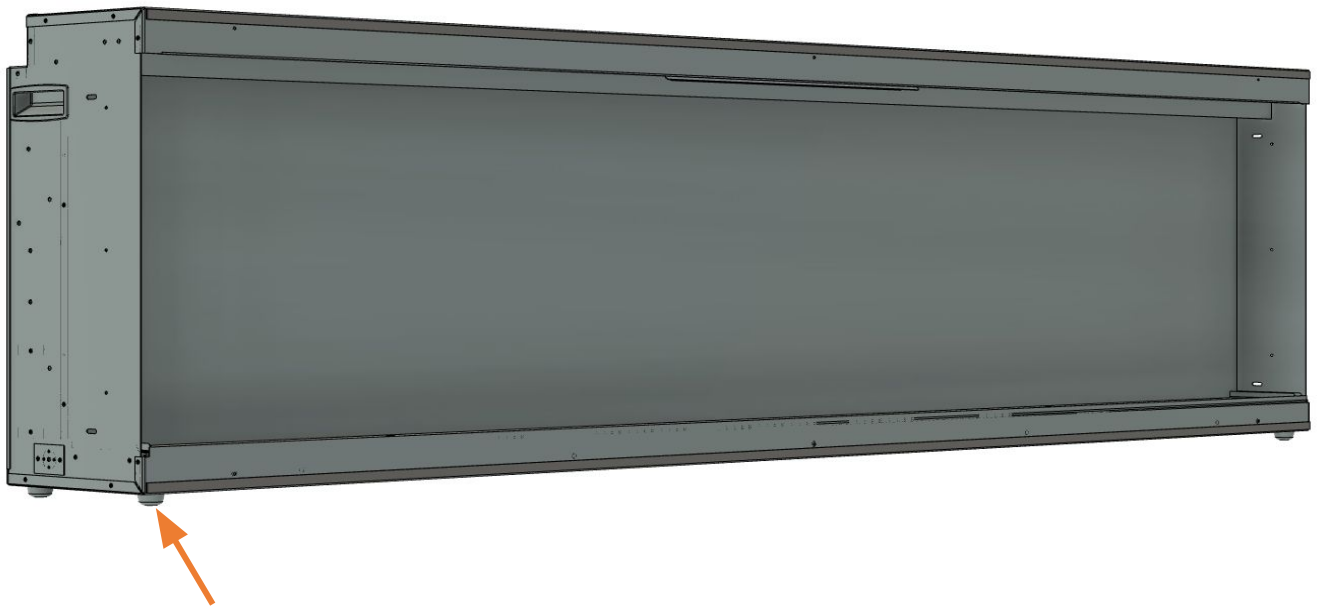

- Remove the optional four rubber feet for more stability.

# Allegro Series Installation Guide

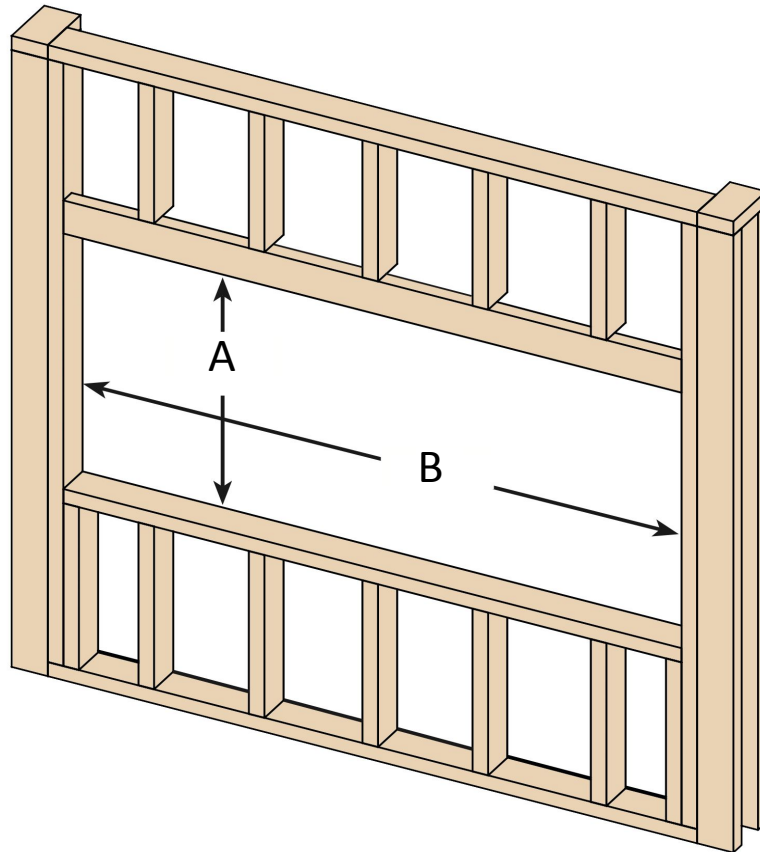


## STEP 1

1. Create the framing according to the dimensions below.

Framing Dimensions				
Model	DY-BFM58	DY-BFM68	DY-BFM76	DY-BFM82
A	486 mm.	486 mm.	486 mm.	486 mm.
	19 1/8 in.	19 1/8 in.	19 1/8 in.	19 1/8 in.
B	1369 mm	1623 mm	1826 mm.	1978 mm.
	53 7/8 in.	63 7/8 in.	71 7/8 in.	77 7/8 in.
Depth	203 mm.	203 mm.	203 mm.	203 mm.
	8 in.	8 in.	8 in.	8 in.

# Allegro Series Installation Guide


---

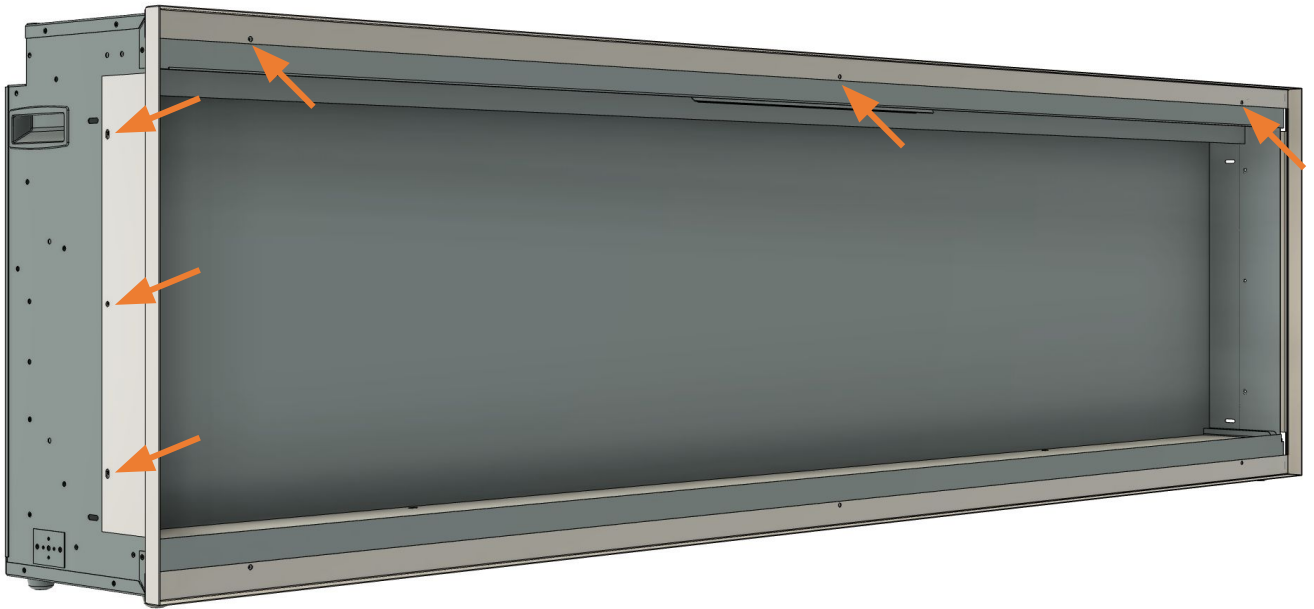

- Insert fireplace into the opening, and ensure the thin edges on the left and right are aligned flush with the surface of the finishing material.

# Allegro Series Installation Guide


---

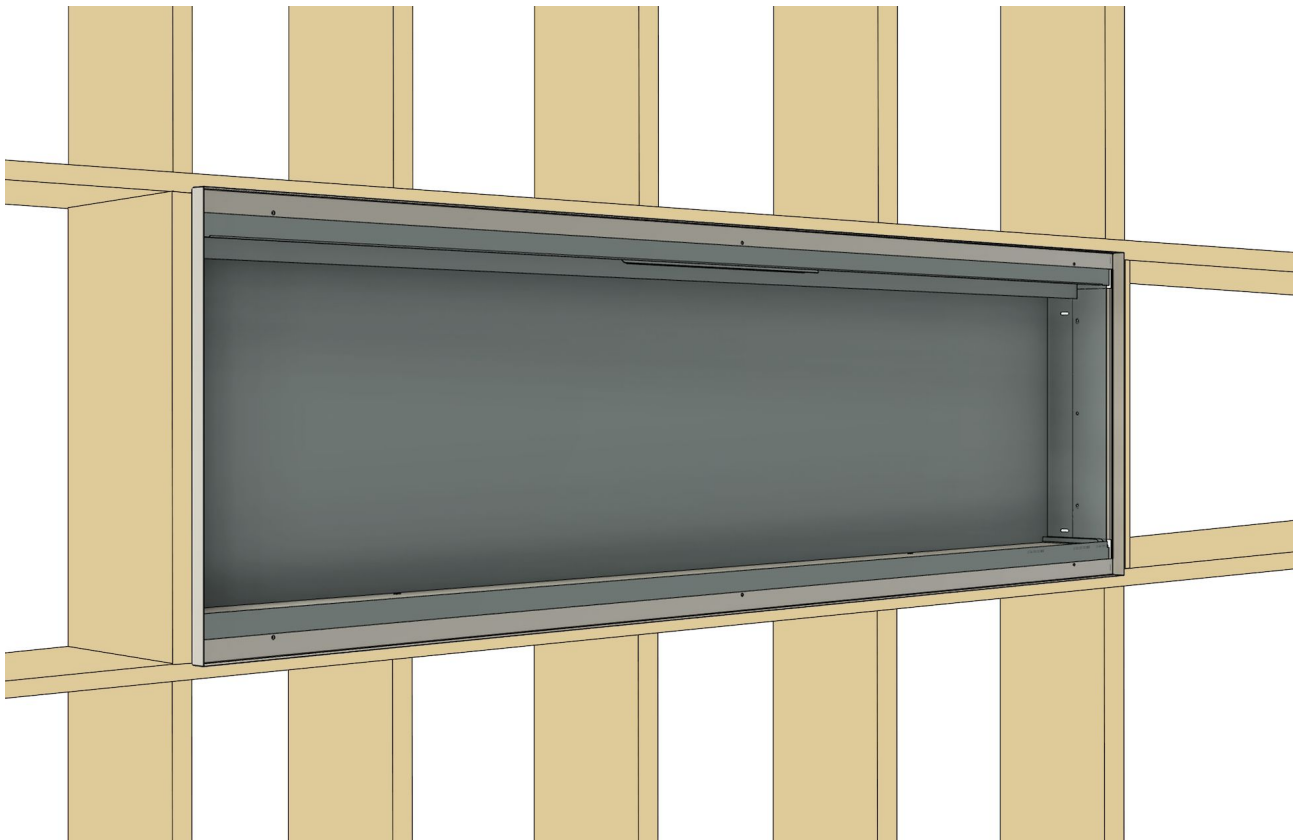

- With the edgings strip installed, position the fireplace into the opening.

# Allegro Series Installation Guide

---

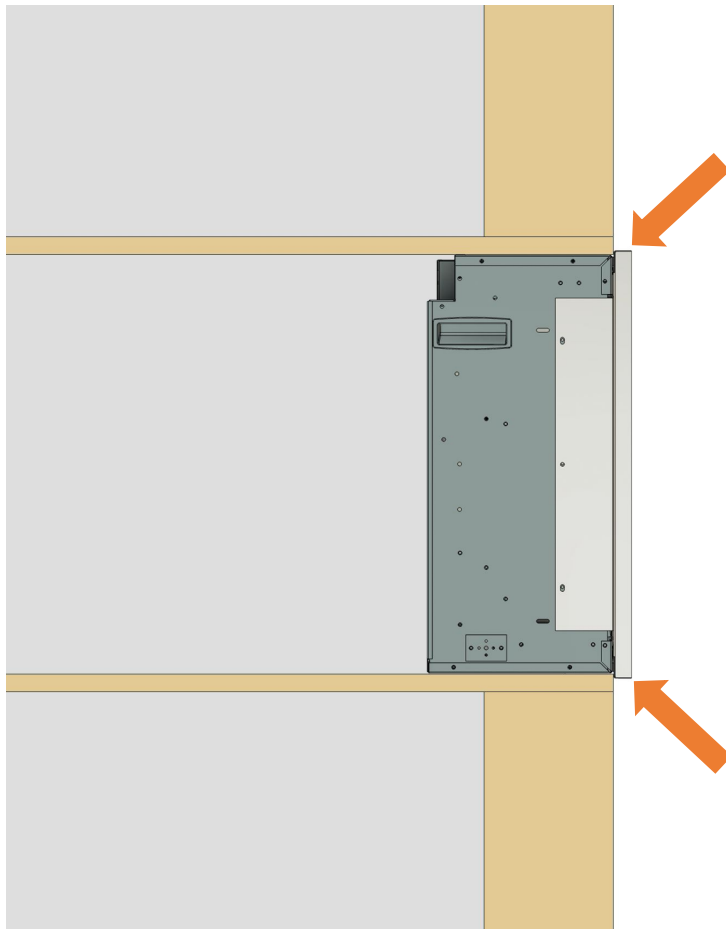


- Ensure the edging strips sit outside of the framing.



# Allegro Series Installation Guide


---

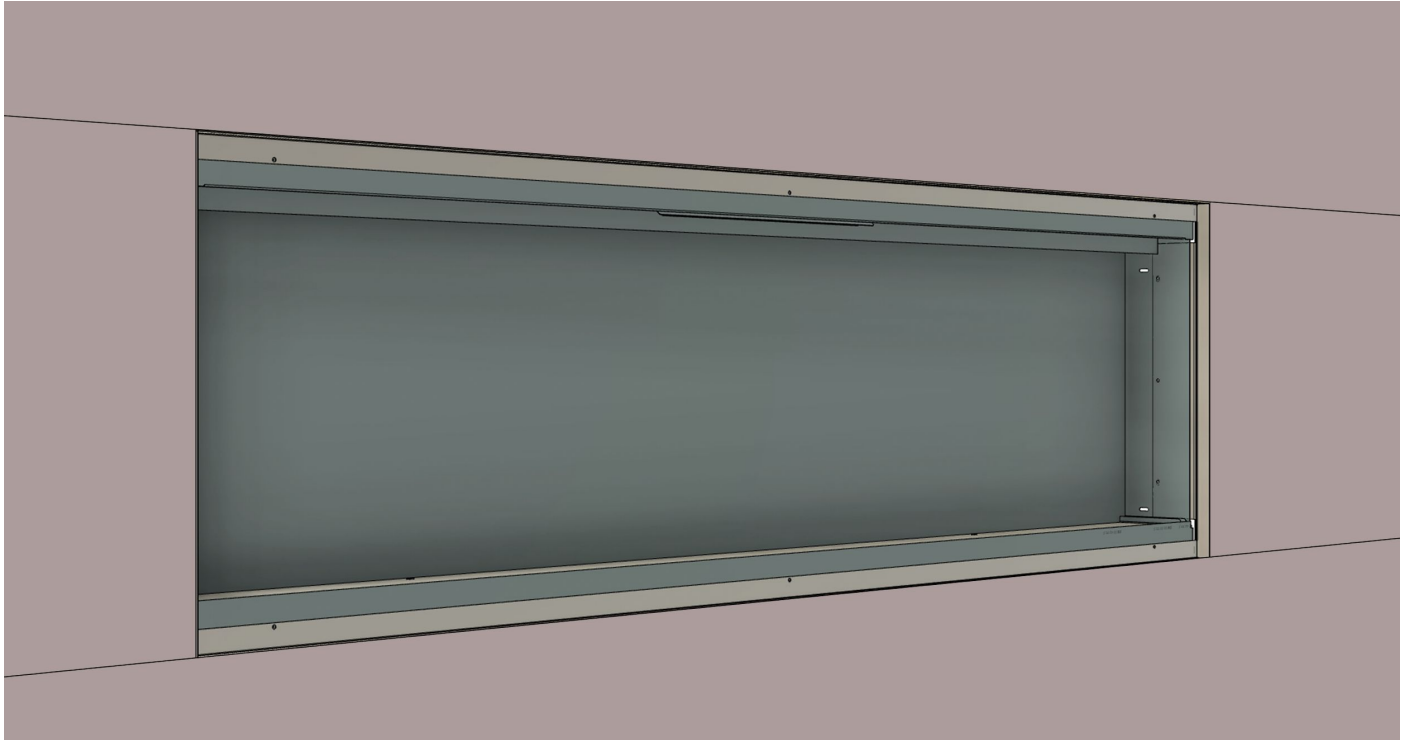

- Finish around the fireplace, the finishing material may touch the outer edges of the fireplace.

# Allegro Series Installation Guide


---

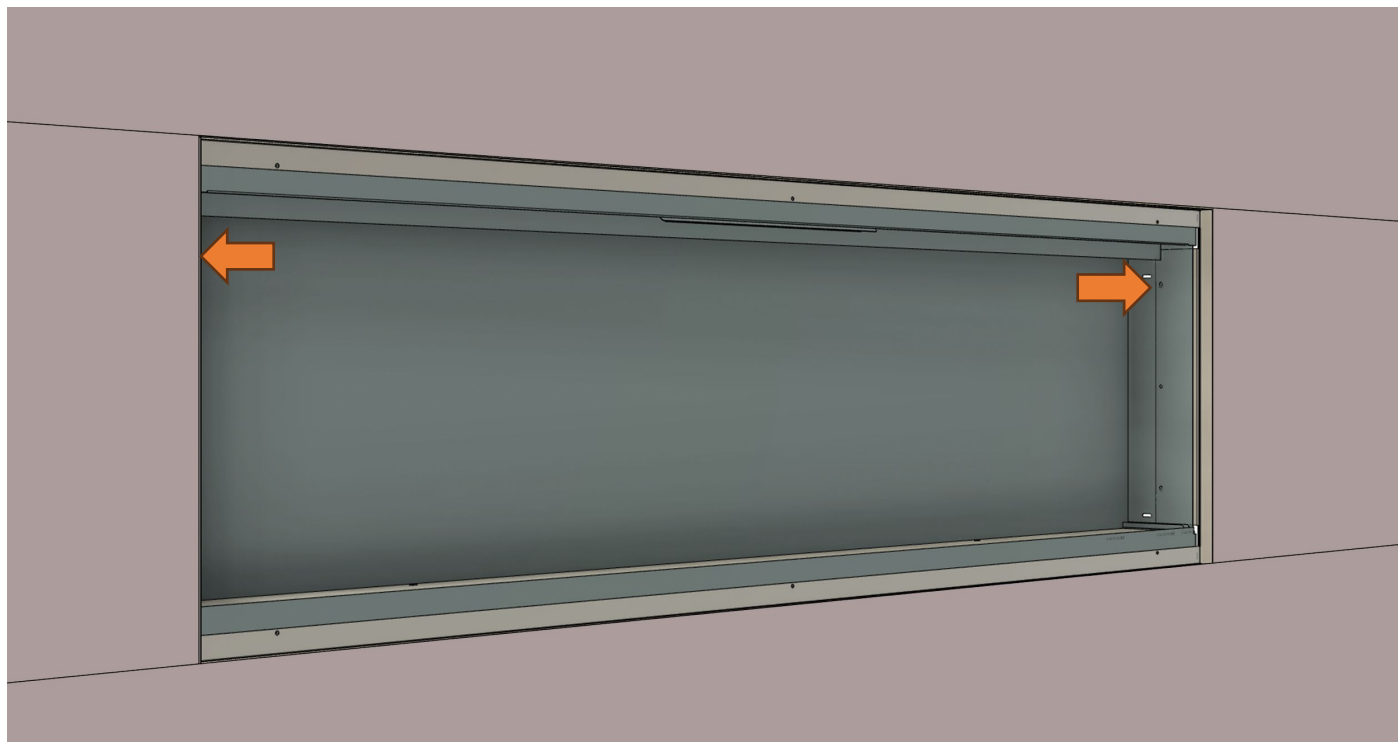

- Secure the fireplace using the provided ST4x12 metal screws, insert the screws into the opening on the top left and right of the side panels. Ensure side panels do not deform when screws are inserted.

# Allegro Series Installation Guide


---

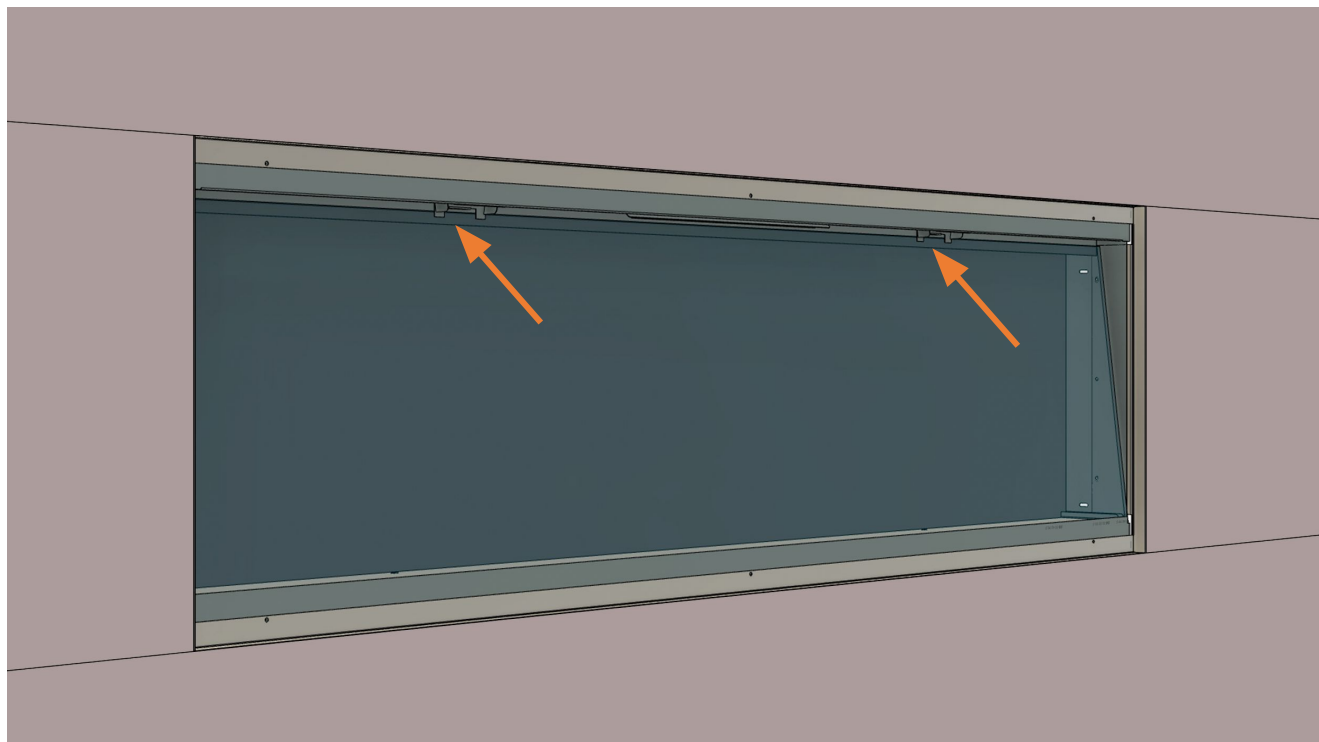

- Place the decorative crystal or wood log media onto the fire bed, then reinstall the front glass – secure the glass by installing the bolt and hinge below the top trim

# Allegro Series Installation Guide

---

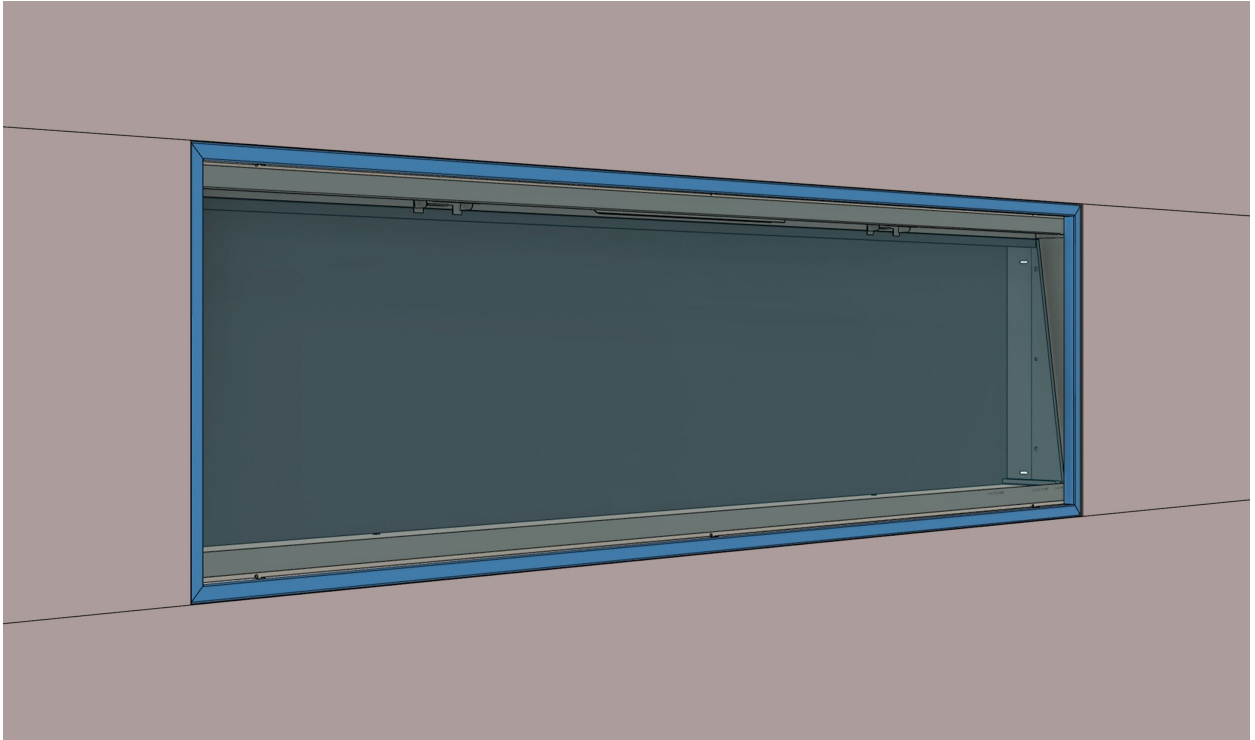

- Place the front trim onto the fireplace – the trim will be self-secured by magnets.

# SUPPORT

For more product information, maintenance guide, and contact information, visit:

[support.dynastyfireplaces.com](https://support.dynastyfireplaces.com)

Contact us:

[support@dynastyfireplaces.com](mailto:support@dynastyfireplaces.com)



THANK  
YOU

[WWW.DYNASTYFIREPLACES.COM](http://WWW.DYNASTYFIREPLACES.COM)