


## MULTI-FUNCTIONAL SCREEN

After a Massage program is selected, In-use screen displays all settings to that program.

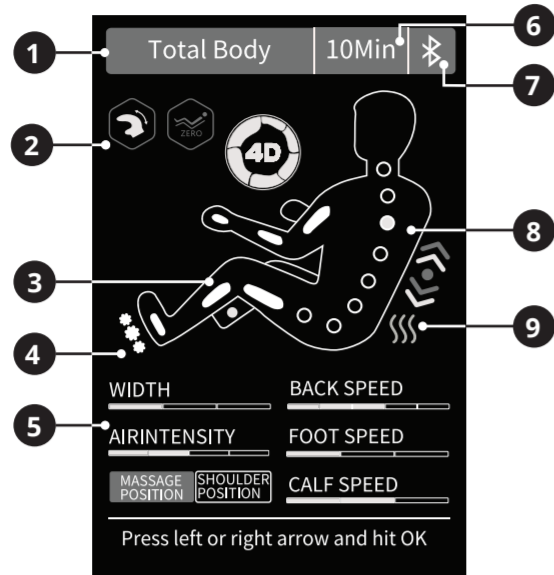

- 1 Program
- 2 Status icons
- 3 Active airbags
- 4 Active rollers
- 5 Indicators
- 6 Time left
- 7 Bluetooth connected
- 8 Back-roller position & direction
- 9 Back heat indicator

## AUTO PROGRAMS

Awaken Intelligent Voice Commands by saying: **'Hi/Hey Massage Chair'**, or press microphone key on remote control.

You may now give your chair any of the commands in the list below **within 6 seconds**. After 6 seconds the Intelligent Voice Command function will turn off automatically and must be awakened again.

You can also press the **Voice Command Button** on your remote control, once to awaken Voice Command, or hold down for 3 seconds to turn off voice control listening.



Make sure to speak the command clearly and slowly.


Commands	Manual Commands
Quick	Turn Chair On
Total Body	Turn Chair Off
Neck & Shoulder	Change to Point Mode
Lower Body	Go a Little Down
Renew	Go a Little Up
Stretch	
Bedtime	
Mid Body	
Shiatsu	
Relieve	
Calm	
Zen	
Stress Free	

**SHARPER IMAGE®**  
 MESSAGE CHAIRS  
 www.sharperimagemassagechairs.com  
 Toll Free #: 888-894-9150  
 72 Stard Rd, Seabrook, NH 03874  
 Version 1.2

SHARPER IMAGE®



## AXIS™ 4D MASSAGE CHAIR

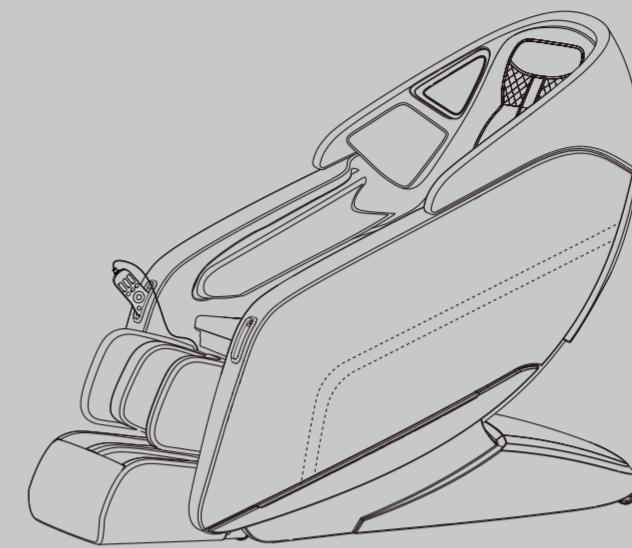

## QUICK START GUIDE

## SHARPER IMAGE® MESSAGE CHAIRS

**Multi-Functional Screen -**  
Use the directional buttons below to navigate these menu screens. Then press OK to select.


**Power -** Powers up the remote or returns the chair to the exit position and powers down remote.

**Directional Button -** Press up, down, left or right to navigate the display screen.

**4D -** Press to toggle the intensity of the 4D back massage mechanism.

**Home -** Shortcut to the home page of all menu screens.

**Feet Adjust -** Press and hold up arrow to bring foot rest up, press and hold down arrow to bring foot rest down.

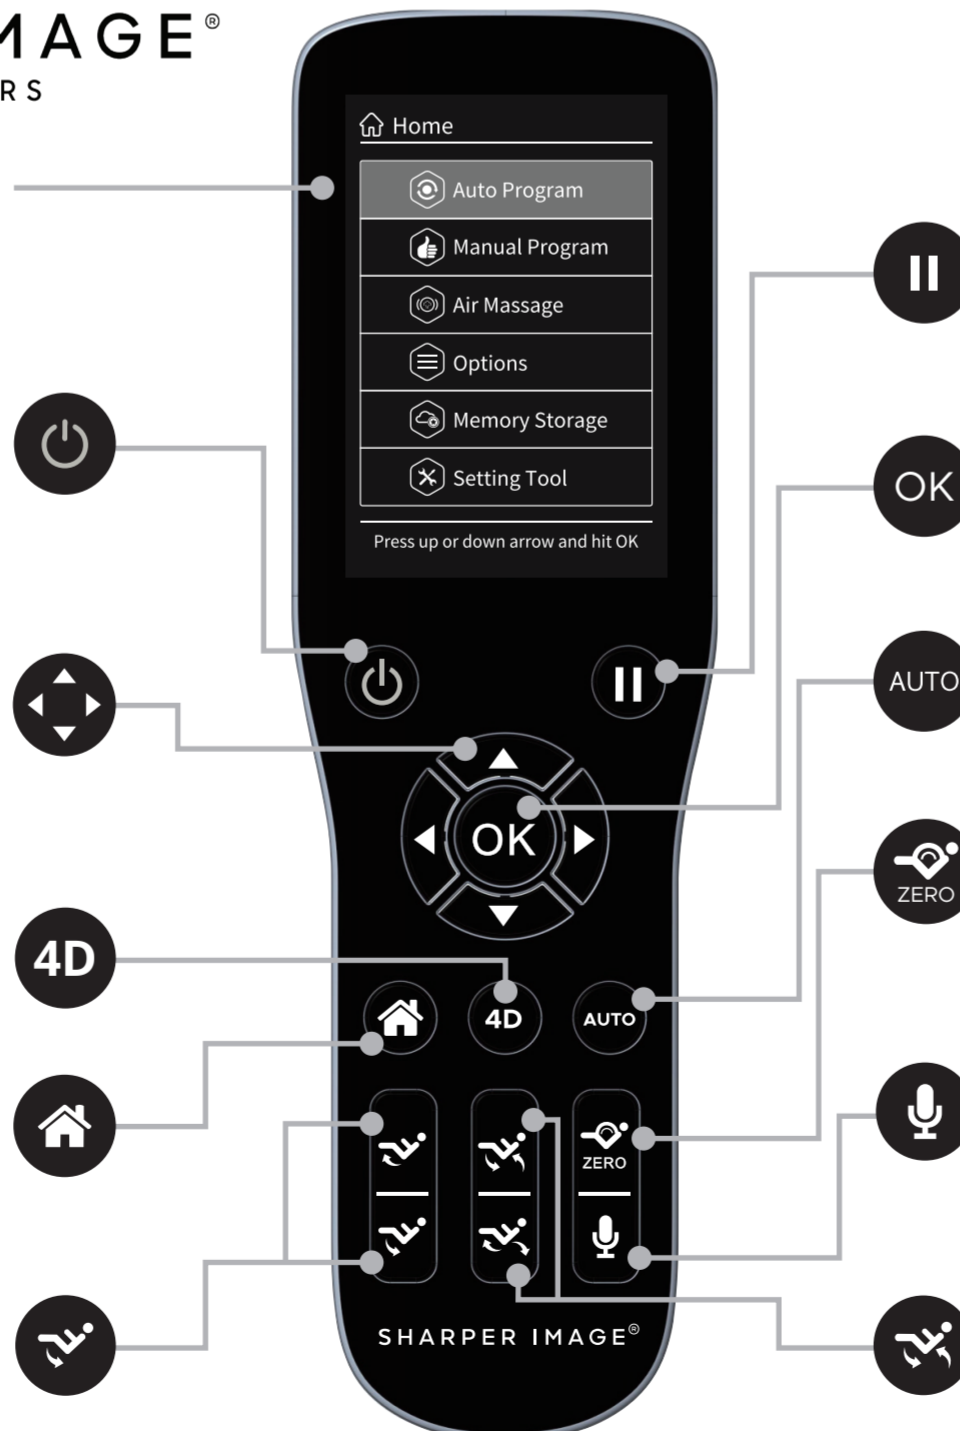

**Pause -** Press to force stop the chair during a program and stop all functions. Press again to resume.

**OK -** After navigating to the command desired on the display, push OK to select.

**AUTO -** Select from 12 pre-set massage programs.

**Zero Gravity -** Press once for zero gravity 1. Press twice for zero gravity 2. Press button again to return to zero gravity 1.

**Voice Command -** Press once to awaken Intelligent Voice Command, hold down for 3 seconds then release to turn listening off. To turn back on, press the key again.

**Seat Back Position -** Press and hold down arrow to recline the seat back and lift up footrest. Press and hold the up arrow to upright the seat back and lower footrest.