

### **CODE NUMBER**

3780425

#### DESCRIPTION

1.6 gpf, Polished Chrome Finish, Top Spud, Single Flush, Battery, Sloan® Exposed Sensor Water Closet Flushometer.

#### **DETAILS**

Flush Volume: 1.6 gpf (6.0 Lpf)Finish: Polished Chrome (CP)

Power Type: BatteryBattery Life: 3 yearsValve: Diaphragm

• Valve Body Material: Semi-red Brass

Fixture Type: Water Closet
Fixture Connection: Top Spud
Rough-In Dimension: 27" (686mm)
Spud Coupling: 1 ½" (38mm)
Supply Pipe: 1" (25mm)

### **FEATURES**

- Flush volumes start as low as 1.6 gpf/6.0 Lpf
- Water conservation is aided by the ADA-compliant, non-hold-open handle, which prevents toilet from exceeding intended flush volume
- Flush accuracy is controlled by CID<sup>™</sup> technology, also enhancing water efficiency
- Integrity of the product is maintained with the vandal-resistant stop cap
- Durability is facilitated with high copper, low zinc brass castings for dezincification resistance
- Adjustable tailpiece to accommodate different height requirements
- High chloramine resistant PERMEX synthetic rubber diaphragm with Linear Filtered Bypass and Vortex Cleansing Action
- Valve body, Cover, Tailpiece and Control Stop shall be in compliance with ASTM Alloy Classification for Semi-Red Brass
- Valve shall be in compliance to the applicable sections of ASSE 1037.



### **COMPLIANCES & CERTIFICATIONS**







(ADA Compliant, cUPC Certified, BAA Compliant)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

## **ELECTRICAL SPECIFICATIONS**

• Battery Life: 3 years

# **VALVE OPERATING PRESSURE (FLOWING)**

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

# **DOWNLOADS**

- Sloan Exposed Installation Instructions
- Sloan Exposed (Spanish) Installation Instructions
- EBV 200 Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Sloan Flushometer Repair and Maintenance Guide
- Additional Downloads

### NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the SLOAN 116 SMOOTH product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer. Find a compatible water closet for this flushometer.



## **ROUGH-IN**

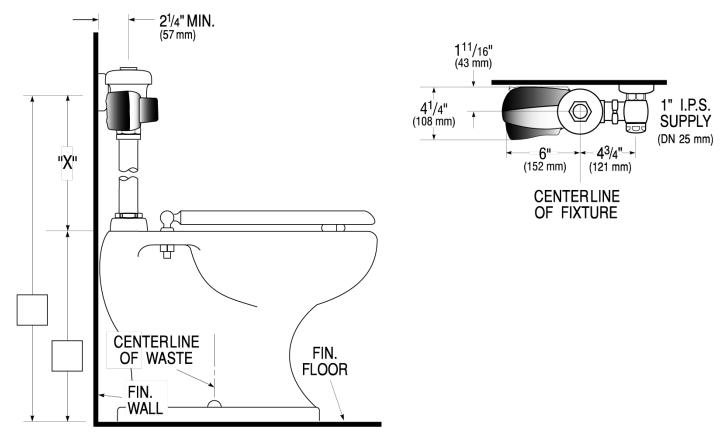

"X" = Model 113 — 16" (406 mm) Model 114 — 34<sup>3</sup>/8" (873 mm) Model 115 — 24" (610 mm) Model 116 — 27" (686 mm)