

ErgoValveBar

4002-SSB, 4002-SSP, 4002-MB, 4002-ORB
PW-94002-38BSS, PW-94002-38PSS, PW-94002-38BM, PW-94002-38BRZSS,




INSTALLATION QUESTIONS?


Before returning your ErgoValveBar to the store, if you have any questions about installation or missing parts please visit our CUSTOMER CARE page at www.PulseShowerSpas.com. We are here to help you.

INSTALLATION INSTRUCTIONS


1. Using scissors, trace the dotted line to cut out the installation template.
2. Place ErgoValveBar on top of trimmed template. Align ErgoValveBar and template. Using a pen, trace the ErgoValveBar support mounts on the template and mark the center of each.
3. Position template around your installed mixing valve and secure with tape (not included) in desired position.
CAUTION: LIVE PLUMBING
4. Drill through tile (only) with a 1/4" diameter masonry or ceramic tile drill bit and then change to 5/16" drill bit to complete.
5. Insert wall anchors.
6. Insert screws into the mounts and secure to wall.
7. Place ErgoValveBar over mounts and secure with set screws.
Installation completed.

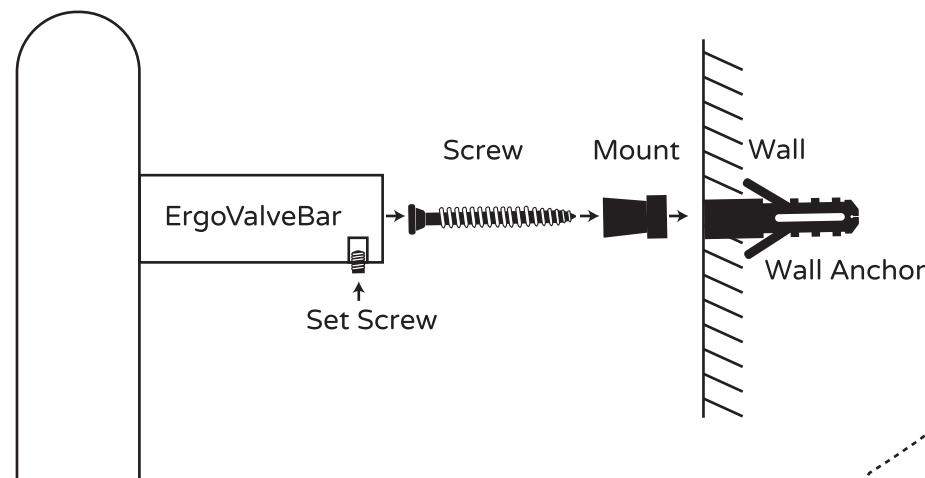

PARTS

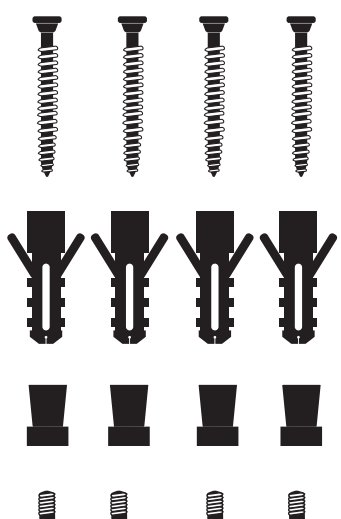

TOOLS REQUIRED

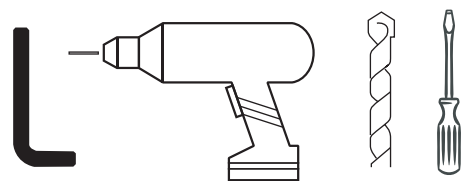

www.PulseShowerSpas.com



WARRANTY

Please visit www.PulseShowerSpas.com for our Manufacturer's Limited Lifetime Warranty information.

IMPORTANT

Check local code for proper placement of ErgoValveBar to meet requirement such as ADA or ANSI 117.1 Consumer Safety Requirements.

IF WALL ANCHOR NOT USED,
ERGOVALVEBAR MUST BE MOUNTED
THROUGH SHOWER WALL AND SCREWED
DIRECTLY TO WOOD OR METAL STUD.