

## INSTALLATION INSTRUCTIONS


## 1<sup>1</sup>/<sub>2</sub>" Schedule 40 ABS Cable Drains Part #'s: 371-LT, 373-LT, 375-LT, 377-LT TRIM SOLD SEPARATELY



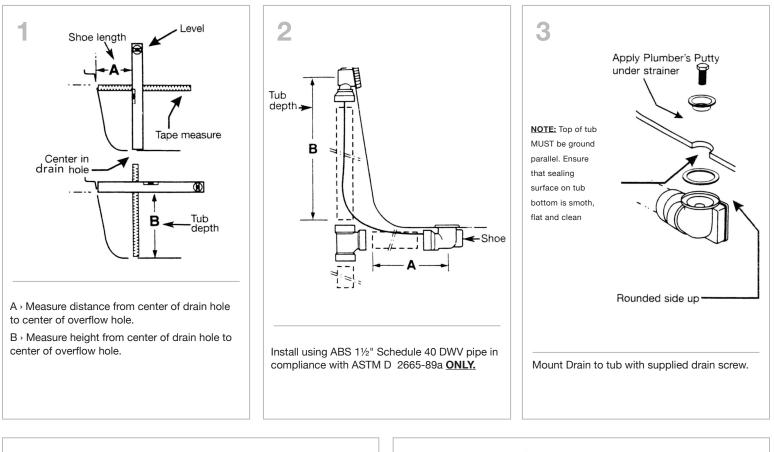


5

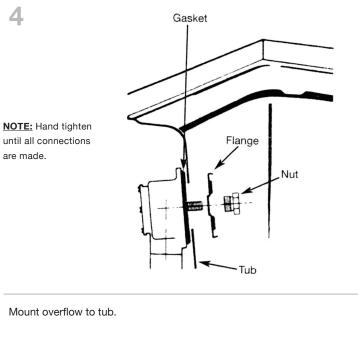

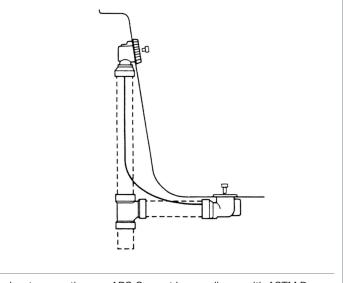


For solvent connection use ABS Cement in compliance with ASTM D 2564-88 ONLY.

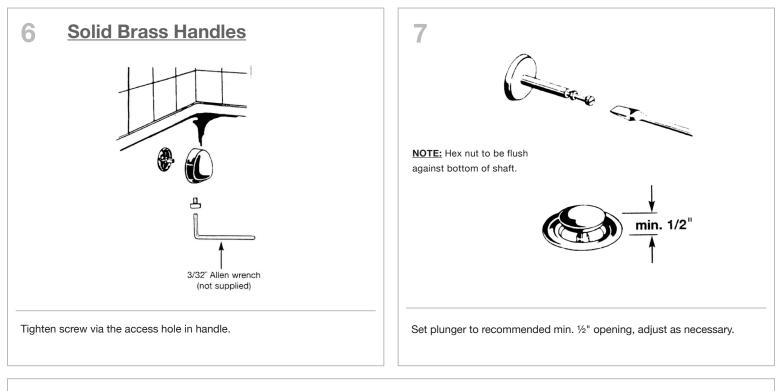

To operate drain, simply turn handle 1/8 turn (clockwise opens, counter-clockwise closes).

## Jaclo 11/2" Tubular Bath Waste and Overflow Replacement Parts

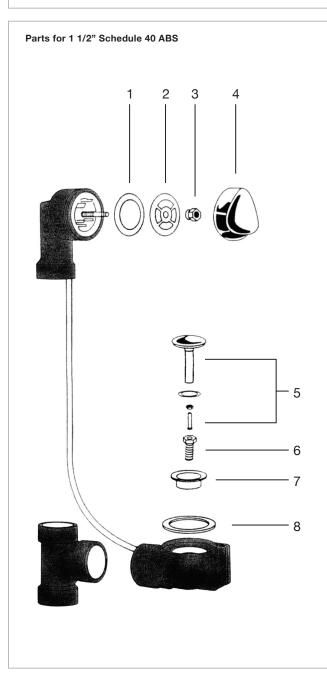

Number	Part Number	Description
1	521-WASHER	Gasket
2	521-P	Flange
3	521-NUT	Nut
4	521-H 321-H	Turn Handle, Solid Brass
5	521-C	Plunger, Solid Brass
6	521-NUT	Drain Screw
7	521-S	Strainer
8	521-WASHER	Gasket

## Troubleshooting

Drain leaks around plunger	<ul> <li>Check plunger O-ring for cuts or nicks</li> <li>Check that strainer flange is level</li> <li>Check plunger screw adjustment</li> <li>Check tub surfaces. Ensure that they are smooth, flat, amd clean.</li> </ul>
Leaks around strainer flange	<ul> <li>Check that strainer flange is level &amp; flush with tub surface</li> <li>Check that plumber's putty is applied evenly</li> </ul>
Water closes plunger when draining	<ul> <li>Wrong size drain</li> <li>Cable too long</li> <li>Secure cable to overflow neck. Recommened using cable tie (not provided)</li> </ul>