
INSTALLATION INSTRUCTIONS

Contempo Tub Spout


Part #: 8230



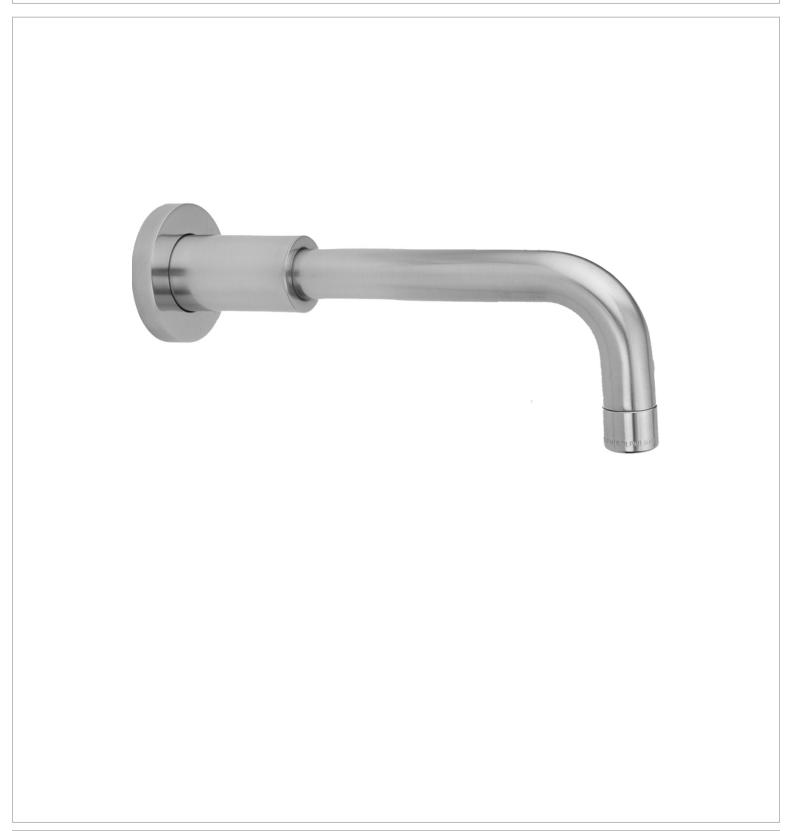


CREATED 4.15.2019

PARTS

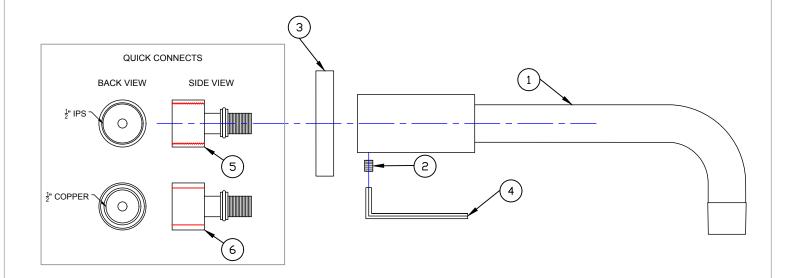

	COMPONENT PARTS
1	SPOUT
2	SET SCREW
3	ESCUTCHEON
4	ALLEN KEY
5	½" IPS QUICK CONNECT
6	½" COPPER QUICK CONNECT

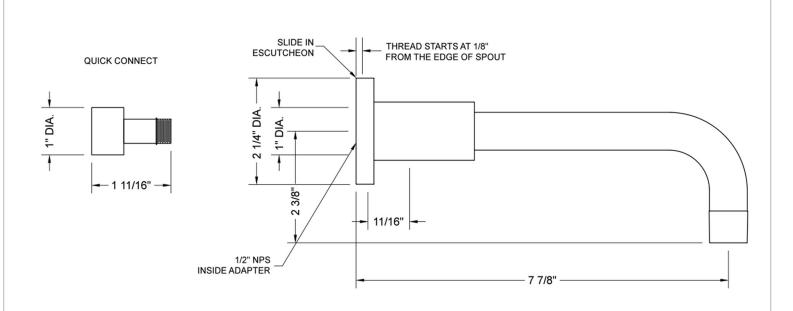

TUB SPOUT INSTALLATION

1. Determine installation 1/2" IPS or 1/2" copper sweat.

Pipe should protrude through finished wall 3/4"

NOTE: ADAPTERS SUPPLIED TO RECEIVE 1/2" IPS MALE NIPPLE OR 1/2" COPPER TUBING

- 2. Loosen set screw located in back of spout and put in secure location.
- 3. Remove quick connect FROM SPOUT using 1/4" allen key.
- 4. Affix quick connect to IPS or copper using appropriate procedures.
- 5. Lubricate o-ring of quick connect.
- 6. Screw tub spout onto quick connect.
- 7. Tighten set screw.
- 8. Slide escutcheon over spout.

CREATED 4.15.201

